




FORTRESS
POWER
Secure your energy

eForce

9.6kWh

Installation
Manual

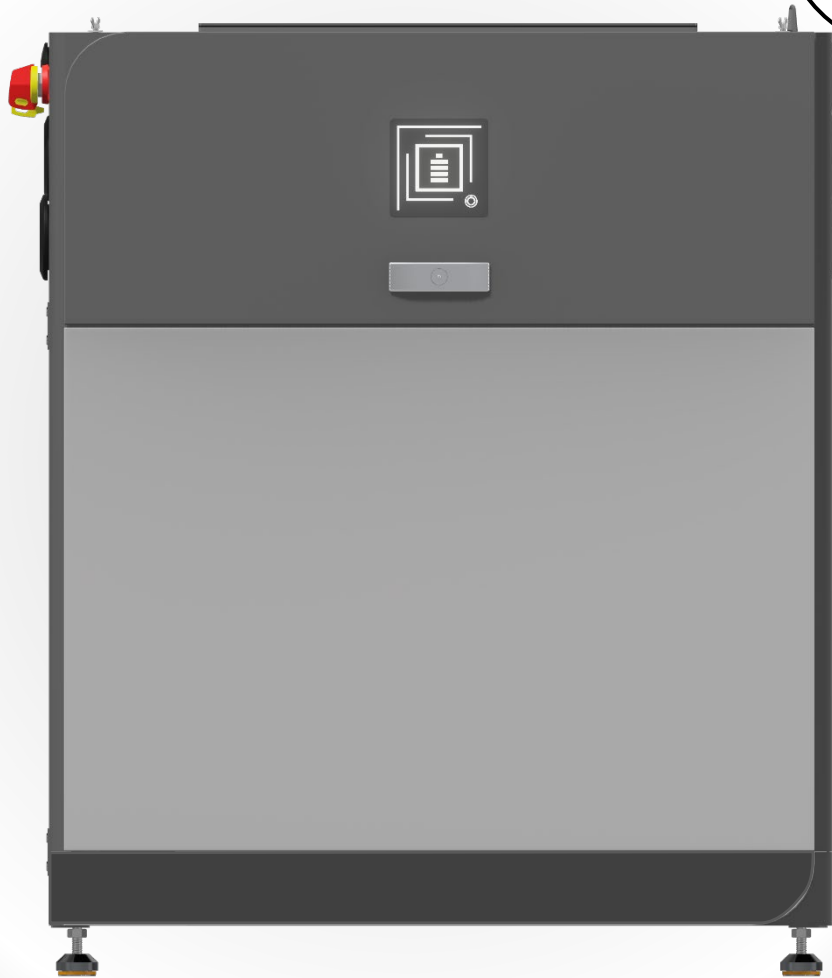

Important: Verify the system configuration before installing.
A proper system design is required for warranty purposes.
Improper system configuration will void the warranty.

Information subject to change without notice.
2024 Fortress Power, LLC. All rights reserved.
EM-V1.0

Guardian APP
SCAN HERE



Updated Documentation
SCAN HERE



System Design Tool
SCAN HERE







Contents

1. ABBREVIATIONS	5
2. CHANGE LOG	6
3. INTRODUCTION	7
3.1 ABOUT FORTRESS POWER.....	7
3.2 WARRANTY SUPPORT.....	7
4. EFORCE INTRODUCTION	8
5. PRODUCT SPECIFICATIONS AND SYSTEM DESIGN	9
5.1 DATASHEET	9
5.2 SYSTEM SIZING	10
6. SAFETY	11
6.1 SYMBOLS	11
6.2 SAFETY PRECAUTIONS AND INSTRUCTIONS	13
6.3 TEMPERATURE CONSIDERATIONS.....	13
6.4 TRANSPORTATION AND HANDLING	14
6.5 RESPONSE TO EMERGENCY SITUATIONS	14
6.6 STORAGE.....	15
6.7 TOOLS & MATERIALS	15
7. UNBOXING CHECK LIST	16
7.1 EFORCE 9.6 BATTERY	16
7.2 EWAY	16
7.3 ENVY PANEL.....	16
7.4 WALL MOUNT KIT (SEPARATE OPTIONAL ACCESSORY KIT)	16
8. BATTERY SPECIFICATIONS	18
8.1 DIMENSIONS AND DEFINITIONS	18
8.1.1 eForce Battery.....	18
8.1.2 eWay.....	19
8.1.3 Conduit & Cable Requirements.....	19
8.1.4 Base.....	20
8.1.5 LED Status Definition.....	21
8.1.6 Communication Board.....	22
9. MINIMUM SPACING REQUIREMENT	23
9.1 ACCEPTABLE BUT NOT LIMITED INSTALLATION CONFIGURATIONS	23
10. INSTALLATION	26
10.1 PREINSTALLATION	26
10.2 MECHANICAL INSTALLATION	27
10.2.1 Floor Standing installation.....	27
10.3 ELECTRICAL INSTALLATION	32
10.3.1 Connection Overview.....	33
11. COMMISSIONING	35
11.1 COMMISSIONING A SINGLE OR MULTIPLE BATTERIES WITH ONE EWAY	35
11.2 COMMISSIONING MULTIPLE EFORCE 9.6 BATTERIES IN PARALLEL	36
12. SETTINGS	37
12.1 VOLTAGE AND AMPERAGE SETTINGS	37
12.2 SYSTEM COMMISSIONING	37
12.3 CHARGING NOTES	38



12.4	DISCHARGING NOTES	38
12.5	UNDERSTANDING CHARGE STAGE	38
12.6	HEATING ELEMENT OPERATION	38
12.7	DECOMMISSIONING	39
13.	CONTACT INFORMATION	40



1. Abbreviations

A = Amperes	m = Meters
AC = Alternating Current	mA = milliamperes
Ah = Amperes hour(s)	mV = millivolts
AWG = American Wire Gauge	N = Neutral
BAT = Battery	NEC = National Electric Code
BMS = Battery Management System	NEMA = The National Electrical Manufacturers Association
CAN = Controller Area Network	NFPA = National Fire Protection Association
CC = Constant Current (Bulk)	NO = Normally Open
CCV = Closed Circuit Voltage	NC = Normally Closed
°C = Degrees Celsius	OCV = Open Loop Voltage
CT = Current Transformer	OSHA = Occupational Safety and Health Administration
CV = Constant Voltage (Absorption)	OT = Over Temperature
DC = Direct Current	OV = Over Voltage
ESS = Energy Storage System	PE = Protective Earth (Ground)
EOL = End of Life	PV = Photovoltaic
°F = Degrees Fahrenheit	R = Electrical Resistance (Ohms)
HV = High Voltage	RS485 = Recommended Standard 485
HVCO = High Voltage Cut-Off	SOC = State of Charge
I/O = Input or Output	SOC = State of Health
ISC = Short Circuit Current	UT = Under Temperature
IP-Ingress Protection	UV = Under Voltage
in = Inches	V = Voltage
lb. = Pounds	VAC = Volts Alternating Current
LED = Light Emitting Diode	VDC = Volts Direct Current
LFCO = Low Voltage Cut-Off	VPP = Virtual Power Plant
LFP = Lithium Ferro Phosphate	W = Watts (Power)
LN1 = AC Line 1	
LN2 = AC Line 2	
LV = Low Voltage	



2. Change Log

VERSION	CHANGE DESCRIPTION
EM-V1.0	



3. Introduction

3.1 About Fortress Power

Our mission is to provide compact, user-friendly, and affordable energy storage solutions using the latest technology for all homes and businesses. Fortress solar energy storage batteries can easily integrate with new and existing PV systems and work with a wide range of existing inverter and charge controller manufacturers for ease in system design.

Contact Information

Corporate Headquarter Address: 2010 Cabot Blvd West, STE L
Langhorne, PA 19047
United States

Website: www.fortresspower.com

Email: techsupport@fortresspower.com

Phone: US: (877) 497-6937
LATAM: (215) 710-8960

3.2 Warranty Support

Unless otherwise submitting a Fortress warranty through the Guardian hub, please submit your eForce 9.6 warranty here:

<https://fortresspower.com/warranty>

Beyond this product manual, you may also find our inverter guides useful to system installation and commissioning:

<https://support.fortresspower.com/portal/en/kb/inverter-guides>

Beyond that, please find additional resources within our Support Portal

<https://support.fortresspower.com/portal/en/kb>

- Create a support ticket.
- Inverter Guides
- Product Manuals
- Firmware Updates
- Warranty Submittal
- System Design
- Application Notes
- Scheduled Meetings
- Accessories





4. eForce Introduction


The **eForce 48VDC Battery** is an advanced energy storage solution designed to cater to both residential and commercial energy needs. This battery is manufactured by Fortress Power, known for its innovative approach to providing reliable and efficient energy storage solutions.

The eForce battery is available in various configurations, including 9.6 kWh, 19.2 kWh, and 28.8 kWh capacities of stack-ability and scalable to 153kWh, making it a solution that can be tailored to different energy requirements. The nominal voltage of the battery is 48V and can operate within a voltage range of 39V to 54V, offering flexibility in various applications.


Technology and Features:


 **Cell Type:** The eForce battery uses Tier-1 Prismatic LFP (Lithium Iron Phosphate) cells, which are known for their safety, long life, and stability.

 **Scalability:** The battery system can be expanded by adding multiple units in parallel, with a maximum of 16 units, depending on the configuration. This makes it suitable for large-scale energy storage needs. Scalability.

 **Communication:** It supports RS485, Wi-Fi, and CAN communication protocols, enabling integration with various energy management systems and monitoring tools.

IP65 **Ingress Protection:** With an IP65 rating, the eForce battery is highly resistant to dust and water, making it suitable for both indoor and outdoor installations.

 **Included Heating Elements:** Integrated heaters, ensuring optimal performance and longevity in colder climates. These heaters maintain the battery's internal temperature within an optimal range, preventing performance degradation caused by low temperatures. This feature is especially valuable during winter months, ensuring consistent energy storage and reliable power supply even in extreme weather conditions.

 **Mounting Options:** The battery offers versatile mounting options, including ground-mount, floor-standing, and wall-mounted configurations (separate accessories).

Benefits and Applications

The eForce 48VDC battery is designed to provide numerous benefits across various applications:

1. **Energy Independence and Off-Grid:** It allows homeowners and businesses to store excess energy generated from renewable sources like solar panels, reducing reliance on the grid and enabling energy independence.
2. **Backup Power:** The battery provides a reliable source of backup power during grid outages, ensuring continuous operation of essential systems.
3. **Peak Shaving:** By storing energy during off-peak hours and discharging during peak demand, the eForce battery helps in reducing electricity costs.
4. **Grid Export, Net Metering and VPP:** Allow the eForce to discharge/charge energy to and from the grid during high demand hours and getting credit/money on your energy bill allowing savings and bankability.
5. **Safety and Longevity:** With a cycle life of 8000 cycles at 70% End of Life (EOL), the eForce battery offers long-term reliability and a 10-year warranty, ensuring peace of mind.



5. Product Specifications and System Design

5.1 Datasheet

eForce

Battery Specifications

	9.6 kWh	19.2 kWh vertical	19.2 kWh horizontal	28.8 kWh vertical	28.8 kWh horizontal
Maximum Units In Parallel	16	8/16		5/16	
Cell Type	Tier-1 Prismatic 15 Cell LFP				
Nominal Capacity	200Ah	2*200Ah		3*200Ah	
Nominal Energy	9.6KWh	19.2KWh		28.8KWh	
Nominal Voltage	48V				
Re-charge Voltage	46V				
Cut-off Voltage	42V				
Maximum Short-Circuit (A)	3000A, 5ms				
Operating Voltage Range	39~54V	39~54V		39~54V	
Closed-Loop Charge/Discharge (A)	120/160	240/250	240/320	250/250	360/480
Open Loop Charge/Discharge (A)	100/100	200/200	200/200	250/250	300/300
Bulk/Absorption Charge(V)	52.5V				
Max Charge/Discharge (A)	195/195	250/250	390/390	250/250	585/585
Surge Discharge Power W (10s)	14,400	14,400	28,800	14,400	43,200
Cycle Life @ EOL 70%	8000 Cycles				




- Topped with the eWay for all AC/DC cable connections.
- Integrated Busbar
- Lockable, Taggable Power/eDisconnect



eWay



eForce 9.6 kWh

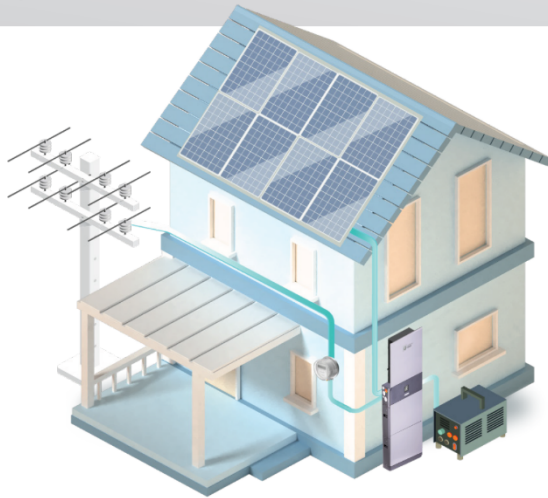

General Data

eForce	9.6 kWh	19.2 kWh	28.8 kWh
Weight	249 lbs (112.9 kg)	465 lbs (210.9 kg)	681 lbs (308.9 kg)
Ambient Temperature Range	-4-140°F (-20-60°C)		
Ingress Protect Degree	IP65		
Communication	RS485/Wi-Fi/CAN		
Dimension (W*D*H)	24.4x9.4x33.5 in (620x240x851mm)	24.4x9.4x53.1 in (620x240x1351mm)	24.4x9.4x72.9 in (620x240x1851mm)
Warranty	10 years		
Mounting Options	Ground-Mount, Floor Standing, Wall-Hanged (Separate Accessory)		


Standard & Certification

eForce/ENVY

Safety Standard	UL1741, UL1973
EMC	IEEE1547, FCC, SDOC
Grid Standards	IEEE1547
Transportation	UN38.3



eforce_073124

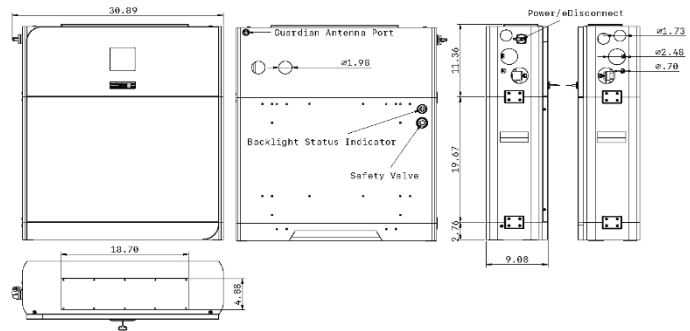

www.FortressPower.com • Sales@FortressPower.com • 877-497-6937



5.2 System Sizing
















Please refer to our sizing guide and warranty letter for appropriate sizes between various inverter models and the eForce. <https://support.fortresspower.com/portal/en/kb/articles/minimum-battery-sizing>. Instead of memorizing the above chart, a good rule of thumb is a maximum of 5.7kW of power output per eForce 9.6 without battery-inverter communication. Alternatively, you could design 9.3kW of power output per eForce 9.6 with battery-inverter communication, but it may limit the inverter burst capacity. **Under no circumstance should you install an inverter with charging capacity greater than 195A per eForce, even if you intend to limit the charge or discharge capacity of the inverter either manually or digitally.**

INVERTER	EFORCE 9.6 OPEN-LOOP	EFORCE 9.6 CLOSED-LOOP
FORTRESS POWER ENVY 8KW	1	1
FORTRESS POWER ENVY 10KW	2	2
FORTRESS POWER ENVY 12KW	2	2
SCHNEIDER ELECTRIC XW PRO 6848	1	1
SCHNEIDER ELECTRIC XW+ 6848	1	n/a
SCHNEIDER ELECTRIC XW+ 5548	1	n/a
SCHNEIDER ELECTRIC SW 4048	1	n/a
OUTBACK POWER RADIAN 8048A	1	n/a
OUTBACK POWER RADIAN 4048A	1	n/a
OUTBACK POWER VFXR 3648A	1	–
OUTBACK POWER FXR 3048A	1	n/a
SOL-ARK 5K	1	1
SOL-ARK 8K	1	1
SOL-ARK 12K	1	2
SOL-ARK 15K	2	2
SMA SUNNY ISLAND 6048	1	1
SMA SUNNY ISLAND 4548	1	1
STUDER INNOTEK AJ 400-48	1	1
STUDER INNOTEK AJ 700-48	1	1
STUDER INNOTEK XTS 1400-48	1	1
STUDER INNOTEK XTS 2600-48	1	1
STUDER INNOTEK XTS 4000-48	1	1
STUDER INNOTEK XTS 6000-48	2	2
STUDER INNOTEK XTS 8000-48	2	2
MAGNUM / SENSATA MS 4448	1	–
MAGNUM / SENSATA MS 4048	1	–
SELECTRONIC SP PRO SPMC 481- AU	1	–
SELECTRONIC SP PRO SPMC 482- AU	2	–
VICTRON ENERGY QUATTRO 48/3000/35	1	–
VICTRON ENERGY QUATTRO 48/5000/70	1	–
VICTRON ENERGY QUATTRO 48/10000/140	2	2
VICTRON ENERGY QUATTRO 48/15000/200	2	2

















6. Safety

6.1 Symbols

Symbol	Meaning	Symbol	Meaning
	Caution! Failure to observe the warning messages may result in injury.		Read operator's manual carefully before performing any operation on the devices.
	Risk of electrical shock, fire, or Damage		Read operator's manual.
	Explosive material		Electrical Ground (connector)
	Battery charging		No smoking or open flame
	Heavy object		No children allowed.
	Do not connect positive and negative terminals in reverse.		Important instructional note, that leads to best results where it is not safety or damage related.
	Components of the product can be recycled.		
	This symbol indicates that a lithium-ion (Li-ion) battery is inside the product and should be disposed of or recycled properly.		
	This symbol indicates that the product shall not be disposed of as household waste, and should be delivered to a designated collection facility for recycling. Proper disposal and recycling can help protect the environment. For more information about the disposal and recycling of this product, contact your local community, disposal service, or dealer.		



Symboles d'avertissement

Symbole	Signification	Symbole	Signification
	Attention ! Le non-respect des messages d'avertissement peut entraîner des blessures.		Lisez attentivement le manuel de l'opérateur avant d'effectuer toute opération sur les appareils.
	Risque de choc électrique		Lisez le manuel de l'opérateur.
	Matières explosives		Mise à la terre électrique (connecteur)
	Charge de la batterie		Ne pas fumer ou flamme nue
	Objet lourd		Aucun enfant n'est autorisé.
	Ne connectez pas les terminaux positifs et négatifs à l'envers.		
	Les composants du produit peuvent être recyclés.		
	Ce symbole indique qu'une batterie lithium-ion (Li-ion) se trouve à l'intérieur du produit et doit être éliminée ou recyclée correctement.		
	Ce symbole indique que le produit ne doit pas être éliminé en tant que déchets ménagers et qu'il doit être livré à une installation de collecte désignée pour être recyclé. Une élimination et un recyclage appropriés peuvent aider à protéger l'environnement. Pour plus d'informations sur l'élimination et le recyclage de ce produit, contactez votre communauté locale, votre service d'élimination ou votre revendeur.		



6.2 Safety Precautions and Instructions

All types of damage to the product may lead to a leakage of electrolyte or flammable gas. During installation of the battery, the utility grid and solar input must be disconnected from the Battery Pack wiring. Wiring must be carried out by qualified personnel. The battery pack contains no user serviceable parts. High voltage or current is present in the device. The electronics inside the Battery Pack are vulnerable to electrostatic discharge. Observe the following precautions:



Risks of explosion

- Do not subject the battery pack to strong impacts.
- Do not crush or puncture the battery pack.
- Do not dispose of the battery pack in a fire.



Risks of fire

- Do not expose the battery pack to temperatures more than 140°F (60°C).
- Do not place the battery pack near a heat source such as a fireplace.
- Do not expose the battery pack to direct sunlight.
- Do not allow the battery connectors to touch conductive objects such as wires.



Risks of electric shock

- Do not disassemble the battery pack.
- Do not touch the battery pack with wet hands.
- Do not expose the battery pack to moisture or liquids.
- Keep the battery pack away from children and animals.



Risks of damage to the battery pack

- Do not allow the battery pack to come in contact with liquids.
- Do not subject the battery pack to high pressures.
- Do not place any objects on top of the battery pack.



IMPORTANT NOTE: Circuit Breakers, Disconnects and Fuses should be employed throughout the energy storage and generation installation to isolate effectively and protect all components of the system against faults, short circuits, polarity reversals or a failure of any component in the overall system. Fuses, breakers, wiring ratings and values should be determined by established standards and evaluated by certified electricians, licensed installers, and regional code authorities. The eForce 9.6 Battery Management System (BMS) alone will not protect the batteries from these extreme electrical events. Failure to adhere to installation protocol will void the warranty.



CAUTION! Verify polarity at all connections with a digital voltmeter before energizing the system. Reverse polarity at the battery terminals will void the warranty and destroy the batteries. Do not short circuit the batteries.

Most batteries pose some risk of shock or sparking during the installation and initial wiring and connection process. Wearing insulated gloves, clothing and footwear and using electrically insulated tools are required when working with eForce 9.6. Cover or remove jewelry or conductive objects (metal bracelets, rings, belt buckles, metal snaps, zippers, etc.) when working with any electrical or mechanical device. Cover or restrain long hair and loose clothing when working with any electrical or mechanical device. **CAUTION!** Do not disassemble or modify the battery. If the battery housing is damaged, do not touch the exposed contents.

6.3 Temperature Considerations



CAUTION! Do not attempt to charge the battery below -4 degrees F (-20 degrees C). Attempts to



charge at below these temperatures can adversely affect State of Health (SOH) and cycle life and will void the warranty; never charge battery if it is frozen; never charge a visibly damaged battery. Charging the battery near freezing should only be done with a low amperage external charger or closed-loop communication inverter unless the battery bank is heated. There is no need to heat the batteries above 50F.

Do not charge the battery when the ambient temperature is freezing or below. Discharge current at sub-freezing temperatures should also be significantly reduced.



CAUTION! Do Not Operate Fortress Lithium Batteries where average internal battery temperature exceed 30 °C / 86 °F over the life of the battery.

Recommended operating parameters of charger/Inverters For 3,000 Cycles:

- Internal battery temperature range: 32 F to 120 F (0 °C to 49°C) without close-loop communication.
- Bulk voltage and absorb voltage should be set to 52.5V if no battery-inverter communication is available.

Recommended operating parameters of charger/Inverters For 8,000+ Cycles:

- Operating temperature range: 50°F to 110°F (0°C to 60°C) per fortress power recommend charge and discharge inverter configuration.

6.4 Transportation and Handling

- Do not knock, drop, puncture, or crush the battery.
- Do not expose battery to flames, incinerate or direct sunlight.
- Do not open the battery case or disassemble the battery.
- Do not lift battery by the terminal cables.
- Do not vibrate the battery.
- Do not expose the battery to water or other fluids.
- Do not expose battery to open flame.
- Do not place the product nearby highly flammable materials, it may lead to fire or explosion in case of accident, Store at cool and dry place.
- Do not store in greenhouses and storage areas for hay, straw, chaff, animal feed, fertilizers, vegetables, or fruit products.
- Store the product on a flat surface; A ventilated area is strongly recommended for handling the product.
- Store the product out of reach of children and animals.
- Store the product where it should be minimal dust and dirt in the area; do not transport battery upside down or with the terminals towards the ground.
- Batteries should be discharged to 30% state of charge or 48V resting voltage before transporting.

6.5 Response To Emergency Situations

- The battery pack consists of multiple batteries and a sophisticated Battery Management System that are designed to prevent hazards resulting from failures. However, Fortress Power cannot guarantee their absolute safety.
- Leaking Batteries
- If the battery pack leaks electrolyte, avoid contact with the leaking liquid or gas. If a person is exposed to the leaked substance, immediately perform the actions described below.
- Inhalation: Evacuate the contaminated area and seek medical attention.
- Contact with eyes: Rinse eyes with flowing water for 15 minutes and seek medical attention.
- Contact with skin: Wash the affected area thoroughly with soap and water and seek medical attention.
- Ingestion: Induce vomiting, and seek medical attention
- Fire
- In case of fire, make sure that an extinguisher is available near the battery pack. If possible, move the battery pack to a safe area before it catches fire.

Note: Fire extinguisher



- Water, carbon dioxide, dry chemical powder and foam are the most effective means to extinguish a Lithium Ferrous Phosphate (LFP) battery fire.
- Use ABC Fire extinguisher, if the fire is not from battery and has not spread to it yet.

6.6 Storage

Store batteries away from direct sunlight and in locations with temperatures ranging between 0°C and 35°C (32°F to 95°F) to avoid exposure to high temperatures.


- Turn off the battery during long-term storage to reduce the self-discharge rate, which is about 1% when the SOC is above 20%.
- Maintain a Relative Humidity (RH) level between 5% and 95% in a dry and clean indoor environment. Prevent contact with corrosive materials and keep away from fire and heat sources.
- For storage durations exceeding one month, ensure the battery's State of Charge (SOC) is maintained between 30% to 50%. It is crucial to charge and discharge the battery every six months to maintain health.
- Regularly check the battery every 3 months to ensure the SOC remains above 20% (greater than 46V). If it falls below this level, charge the battery up to 47V before returning it to storage.
- When placing systems into storage, set the SOC to 30~50% and periodically verify that it does not drop below 20%.

If you expect the battery to be left unattended for extended periods, set a higher battery cutoff voltage as a precaution. This is particularly important if the power supply is critical, and the charging sources (like solar panels) may be obstructed by snow or dust. In such scenarios, installing a backup generator with an AutoStart feature is advisable. Note that the inverter and battery management system may impose a minor load on the battery, potentially depleting it over long durations without any charging sources. Following these guidelines will help ensure your battery's longevity and reliability, even during extended storage periods.

6.7 Tools & Materials

The following tools and materials are required and are not included:


- OSHA approved personal protective equipment, Safety Shoes, Safety Glasses, Insulated Gloves, Weightlifting Belt.
- Bendable Screwdriver extension
- Allen Metric hex socket kit
- Allen Metric wrench kit
- Phillip and Flat Head Screwdriver Set.
- Power Drill
- Hand Truck (Optional)
- Positive and negative battery cables, we recommend copper cable starting at 3/0 for runs of less than 10ft. Please refer to your adopted version of the National Electric Code or Local Authority Having Jurisdiction for more guidance (not included).
- UL Battery Cable or Welding Cable & Positive and Negative Terminal lugs. Note that the ring terminal hole size for the terminal lug is 3/8ths or larger.
- Basic electrician Tools, Including Electrician Scissors, Wire Stripper and Crimper (Up to 4/0)






7. Unboxing Check List


7.1 eForce 9.6 Battery

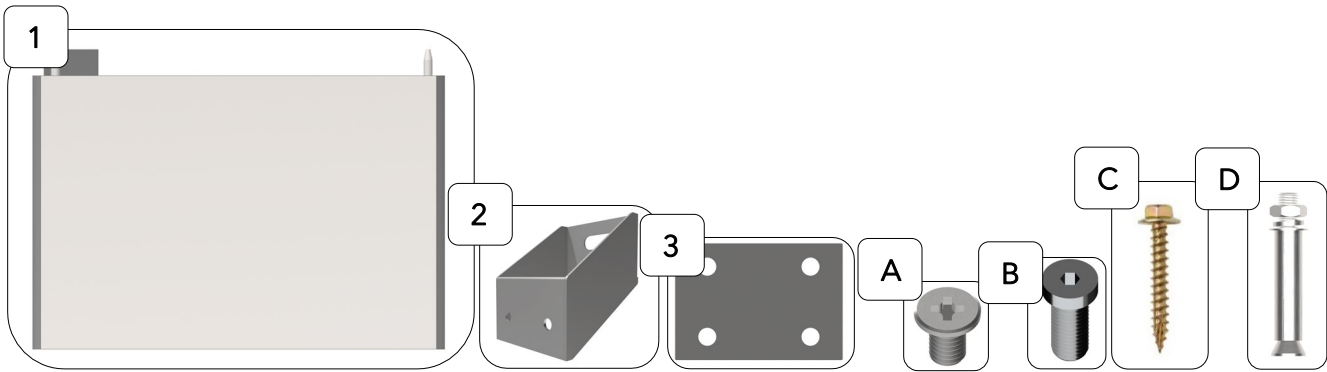


7.2 eWay

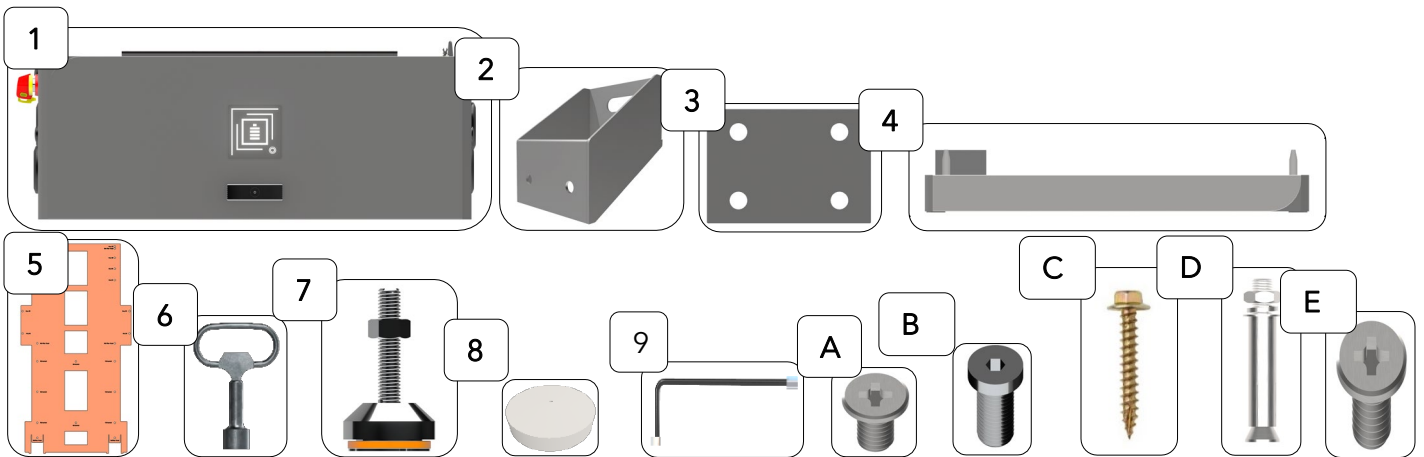

7.3 Envoy Panel

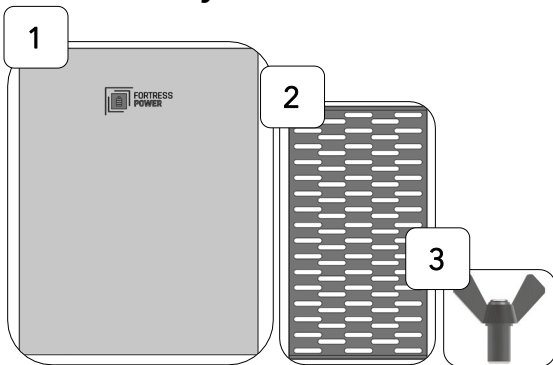

7.4 Wall Mount Kit (Separate optional accessory kit)

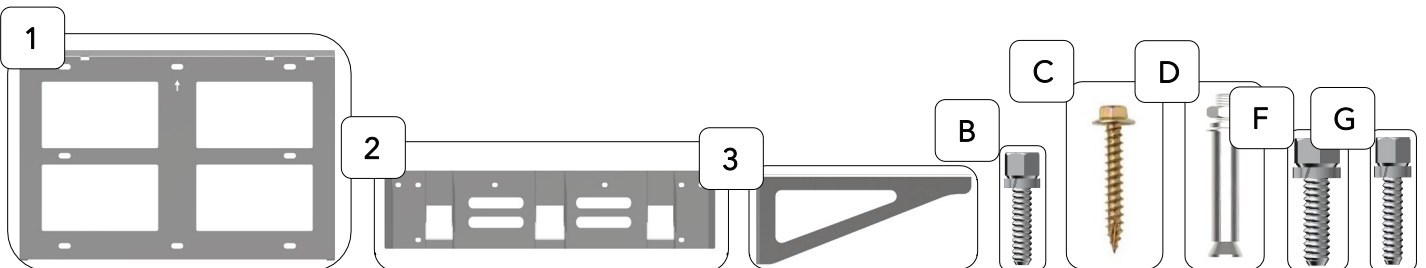







PART	DESCRIPTION	QTY
eForce 9.6kWh Battery		
1	eForce 9.6kWh Battery	1
2	Wall fitted bracket	2
3	Battery side brace	2
A	M5*6 Cross Flat bolt	8
B	5*12mm Hexagon socket bolt	4
C	M8*60mm screws	2
D	M6*60mm expansion bolts	2
eForce eWay		
1	eForce eWay	1
2	Wall fitted bracket	2
3	Battery side brace	2
4	Base Support	1
5	Wall mounting/fitted template	1
6	eWay Key	1
7	Base Legs	4
8	Hole Caps	2
9	BAT- BAT COM Cable, BAT-INV COM Cable	1 each
A	M5*6 Cross Flat bolt	8
B	5*12mm Hexagon socket bolt	4
C	M8*60mm screws	2
D	M6*60mm expansion bolts	2
E	M6*14mm Hexagon socket bolt	1
Envy Panel		
1	Envy Front Panel	1
2	Hanging Panel	1
3	Butterfly M5X8 screws	2
Optional Wall Mounting Kit		
1	Wall Rack	1
2	Wall Hanging Panel	2
3	Shelf Bracket	2
B	5*12mm Cross Point Hexagon bolt	16
C	M8*60mm screws	12
D	M6*60mm expansion bolts	12
F	8*20mm Cross Point Hexagon bolt	4
G	5*20mm Cross Point hexagon bolt	2



8. Battery Specifications

8.1 Dimensions and Definitions

8.1.1 eForce Battery

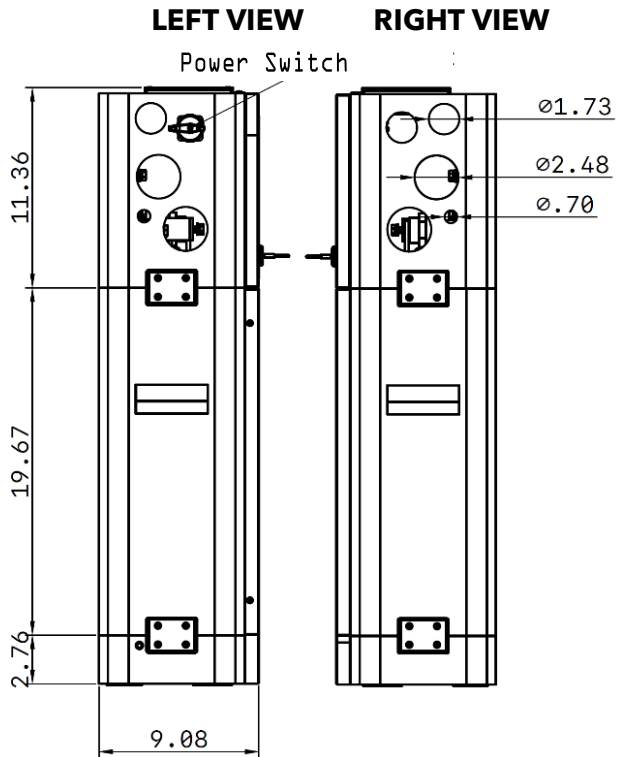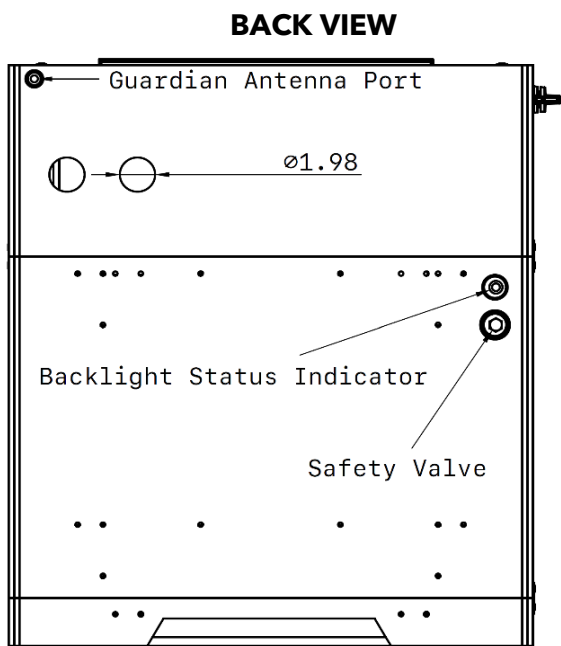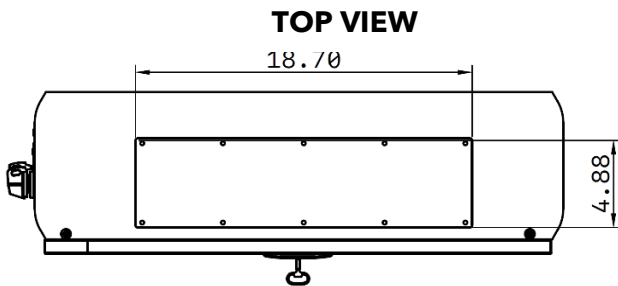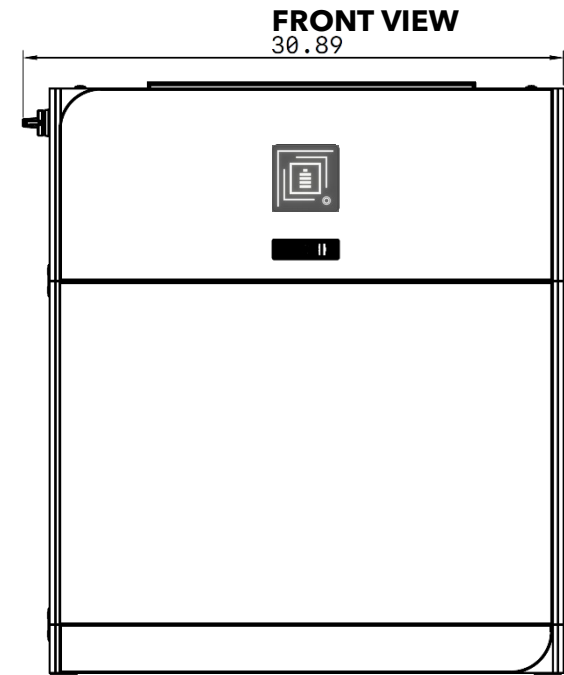

Power Switch

Allows user to power on the eForce and at the same time provide a safe means of disconnecting the battery from a 48V HYBRID inverter and disabling battery voltage output. Lockout hole measures 0.24".

E-Stop Feature


When paired with the Envy True 12kW/10kW/8kW it allows the option of providing complete ESS disconnection when enabling Rapid Shut Down (RSD) allowing first responders to safely mitigate any hazardous event within the property building.

Guardian Antenna Port


Allows user to extend the Guardian WIFI capability. Use the included antenna included with the Guardian.

Backlight Status Indicator

Serves to indicate Normal battery operation or Fault.

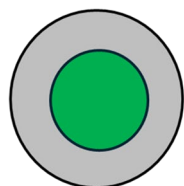

Normal Status

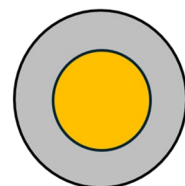


Fault Status




8.1.2 eWay


Front View with Closed Cover

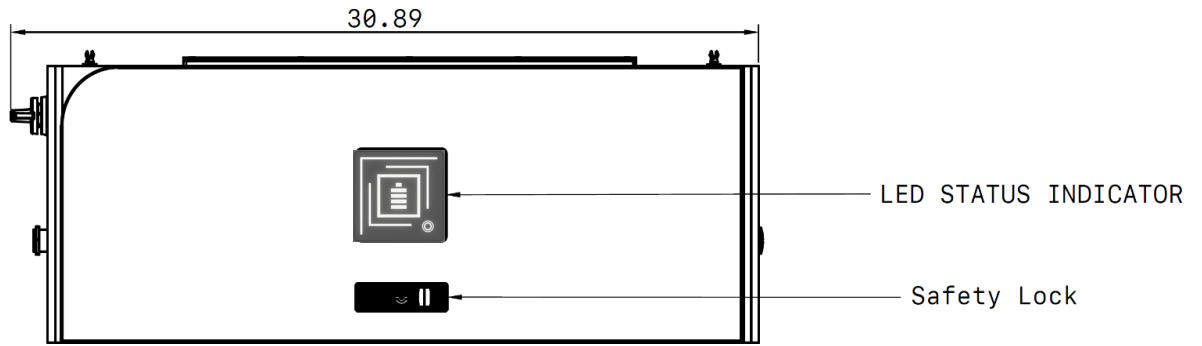

Front View with Opened Cover (Removable with Philips flat-head tool)

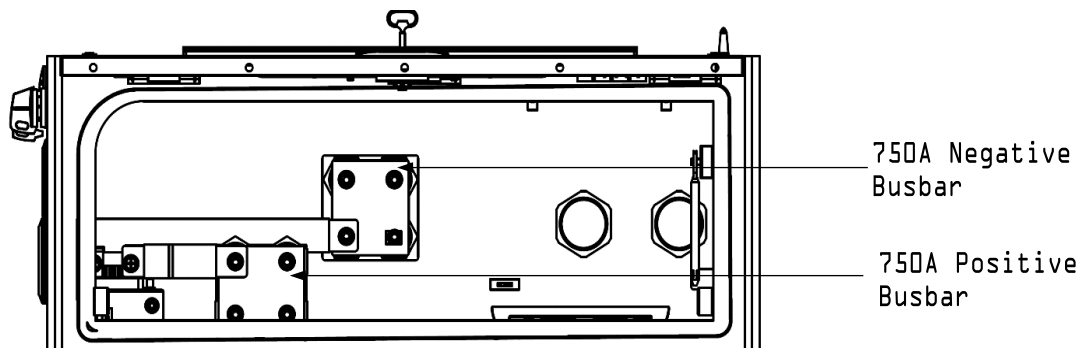


Bottom View

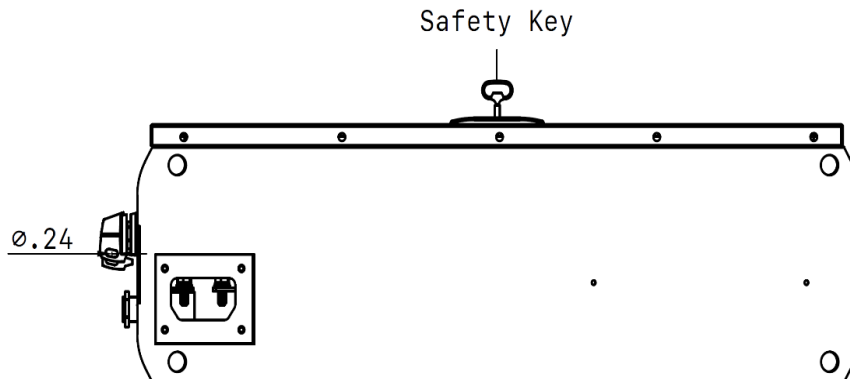


8.1.3 Conduit & Cable Requirements

KNOCKOUT HOLE SIZE (IN.)		REQUIRED CONDUIT MEASUREMENT (IN)	
	0.70		1/2
	1.73		1 1/4
	1.98		1 1/2
	2.48		2
CABLE REQUIREMENTS			
INVERTER	Cable Size	Qty	eWay Busbar Torque Specifications
ENVY 12kW	Up to 4/0	1 pair per eWay	6.2lbf-ft (8.5Nm)
ENVY 10kW	Up to 3/0	1 pair per eWay	6.2lbf-ft (8.5Nm)
ENVY 8kW	Up to 3/0	1 pair per eWay	6.2lbf-ft (8.5Nm)

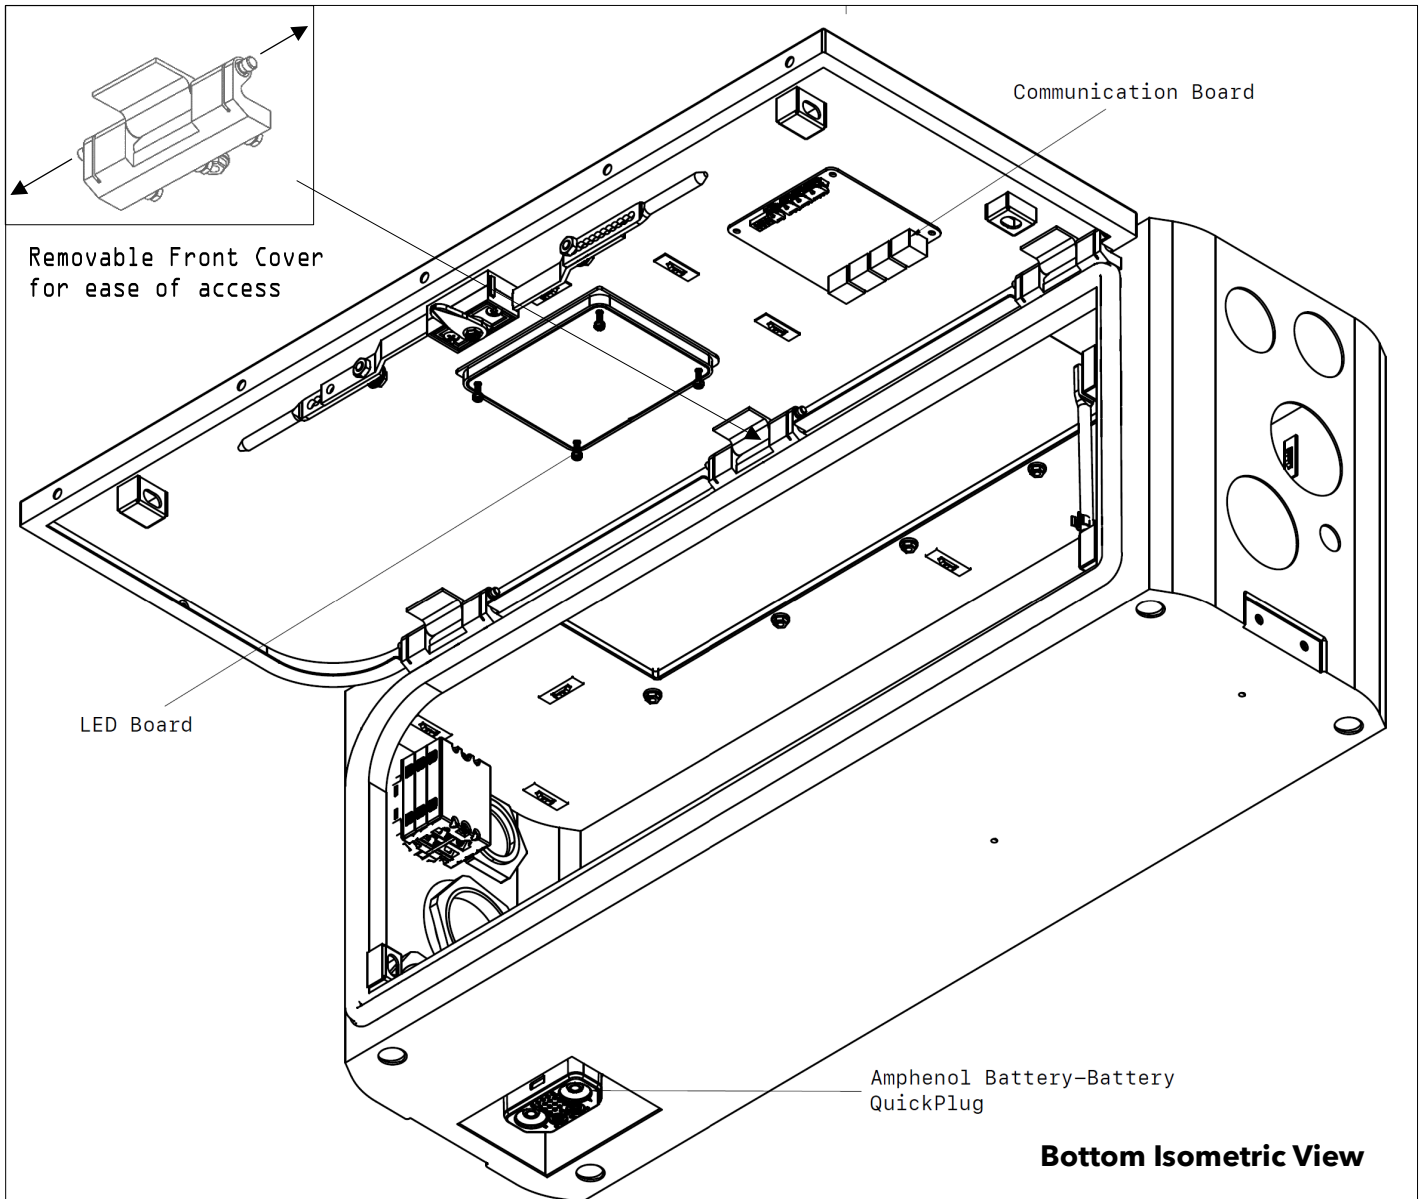

8.1.4 Base

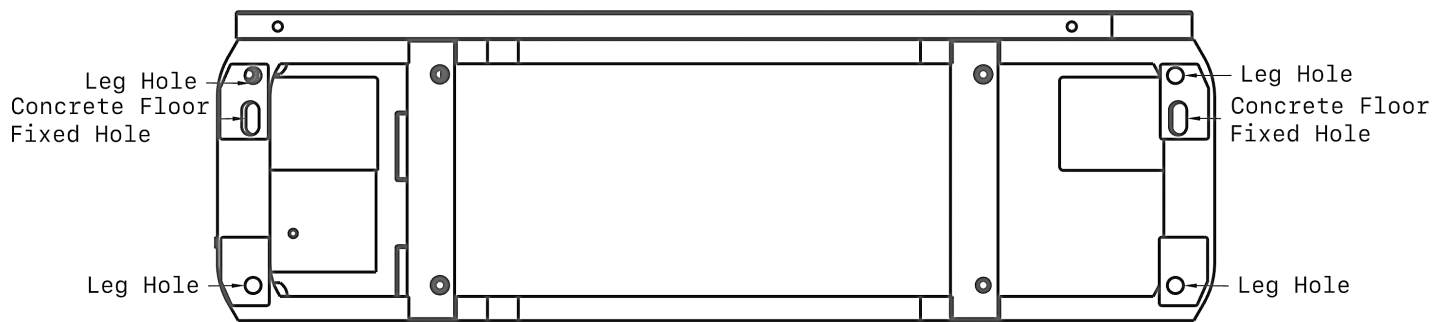



8.1.5 LED Status Definition

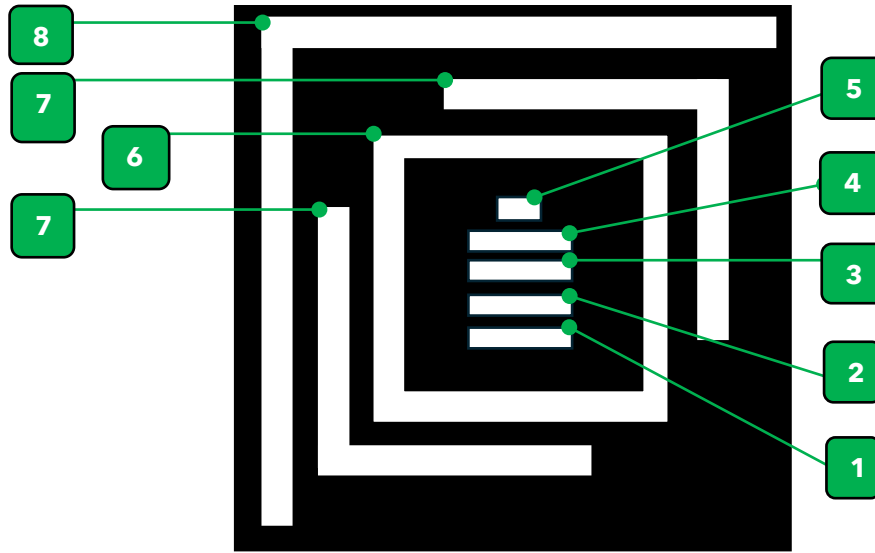


Table Legend

- Solid
- ☀ Quick Flash
- ⊗ Slow Flash


OPERATING STATUS	PROTECTION/ ALARM/ NORMAL	SOC %	LED5	LED4	LED3	LED2	LED1	LED6	LED7	LED8								
POWER ON			Boot in 5S	Boot in 5S	Boot in 5S	Boot in 5S	Boot in 5S	Boot in 5S	Boot in 5S	Boot in 5S								
CHARGING		>95	○	○	○	○	○			○								
		75~95	off	☀	○	○	○			○								
		50~75	off	off	☀	○	○			○								
		25~50	off	off	off	☀	○			○								
		0~25	off	off	off	off	☀			○								
		0%	off	off	off	off	off			○								
DISCHARGING		>95	○	○	○	○	○			○	○							
		75~95	off	⊗	○	○	○			○								
		50~75	off	off	⊗	○	○			○								
		25~50	off	off	off	⊗	○			○								
		0~25	off	off	off	off	⊗			○								
		0	off	off	off	off	off			○								
CHARGE	Alarm normal	The corresponding SOC percentage is illuminated								○								
	Overcharge protection									○								
	Over-temperature, under-temperature, over-current protection									⊗								
DISCHARGE	Alarm normal									○								
	Over-temperature, under-temperature, over-current protection									⊗								
	Over-discharge protection, acquisition failure (temperature or voltage), short circuit, reverse polarity protection									off								
FAULT											off	off	off	off			off	
ADDRESSING AND COMMUNICATION	succeed															○	○	
	fail															off	off	



8.1.6 Communication Board


8.1.6.1 Port Definition

AREA	DESCRIPTION
1	Battery to Battery communication port
2	Guardian/Gateway RJ45 connection port
3	Internal BMS Connection
4	Battery- to Inverter communication Port
5-6	Battery to Battery Relay Parallel Port (Common)
7	Power Source
8	Guardian Power Source (Cable Included) Do not use the power outlet plug if choosing this method of connection
9	DIP switch for Inverter Protocol Selection

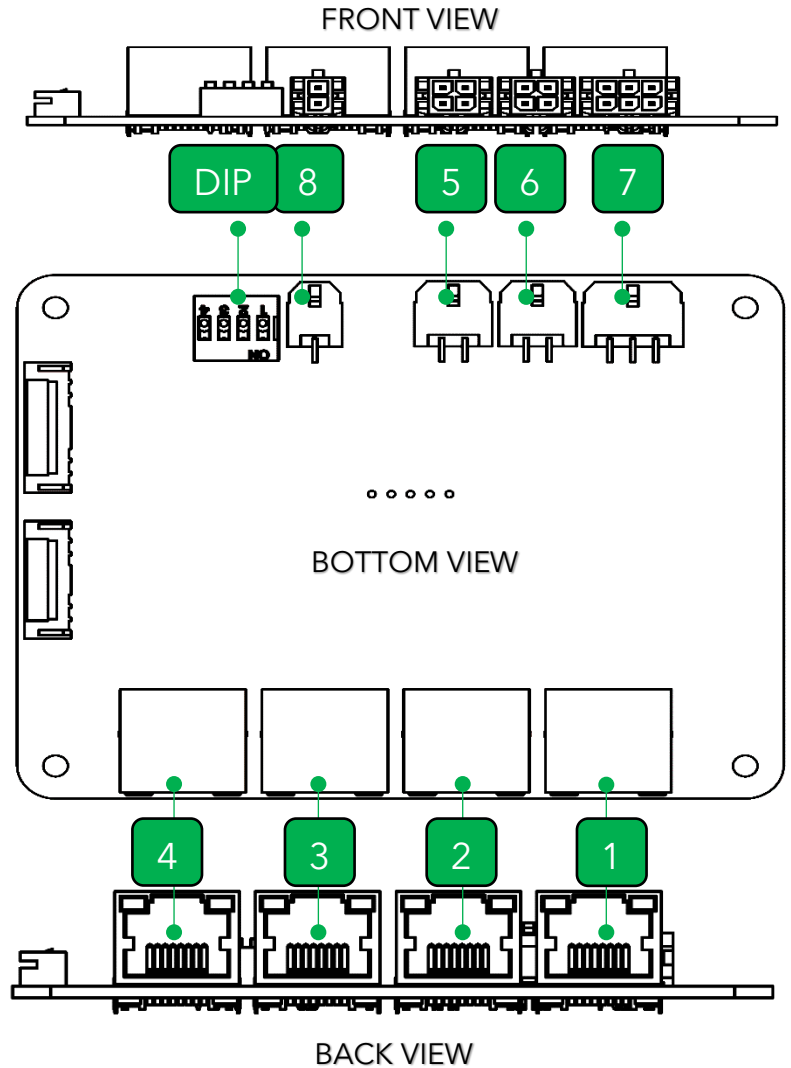

8.1.6.2 Inverter Communication Protocol


The eForce eWay has built-in DIP switches that allow users to manually select Inverter Protocol. When paralleling multiple batteries using the eWay, only set the Primary Battery DIP switches in an ON position according to inverter protocol. Failure to do so may cause abnormal behavior.

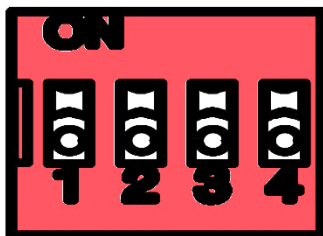


COM PROTOCOL	DIP#1	DIP#2	DIP#3	DIP#4
FORTRESS POWER-485	0	0	0	0
FORTRESS POWER-CAN	1	1	1	0
SOL-ARK-CAN	1	0	0	0
SCHNEIDER-CAN	0	1	0	0
SCHNEIDER-485	1	1	0	0
SMA-CAN	0	0	1	0
VICTRON-CAN	1	0	1	0
GROWATT-CAN	0	1	1	0
APSYSTEMS CAN	1	1	1	0



9. Minimum Spacing Requirement

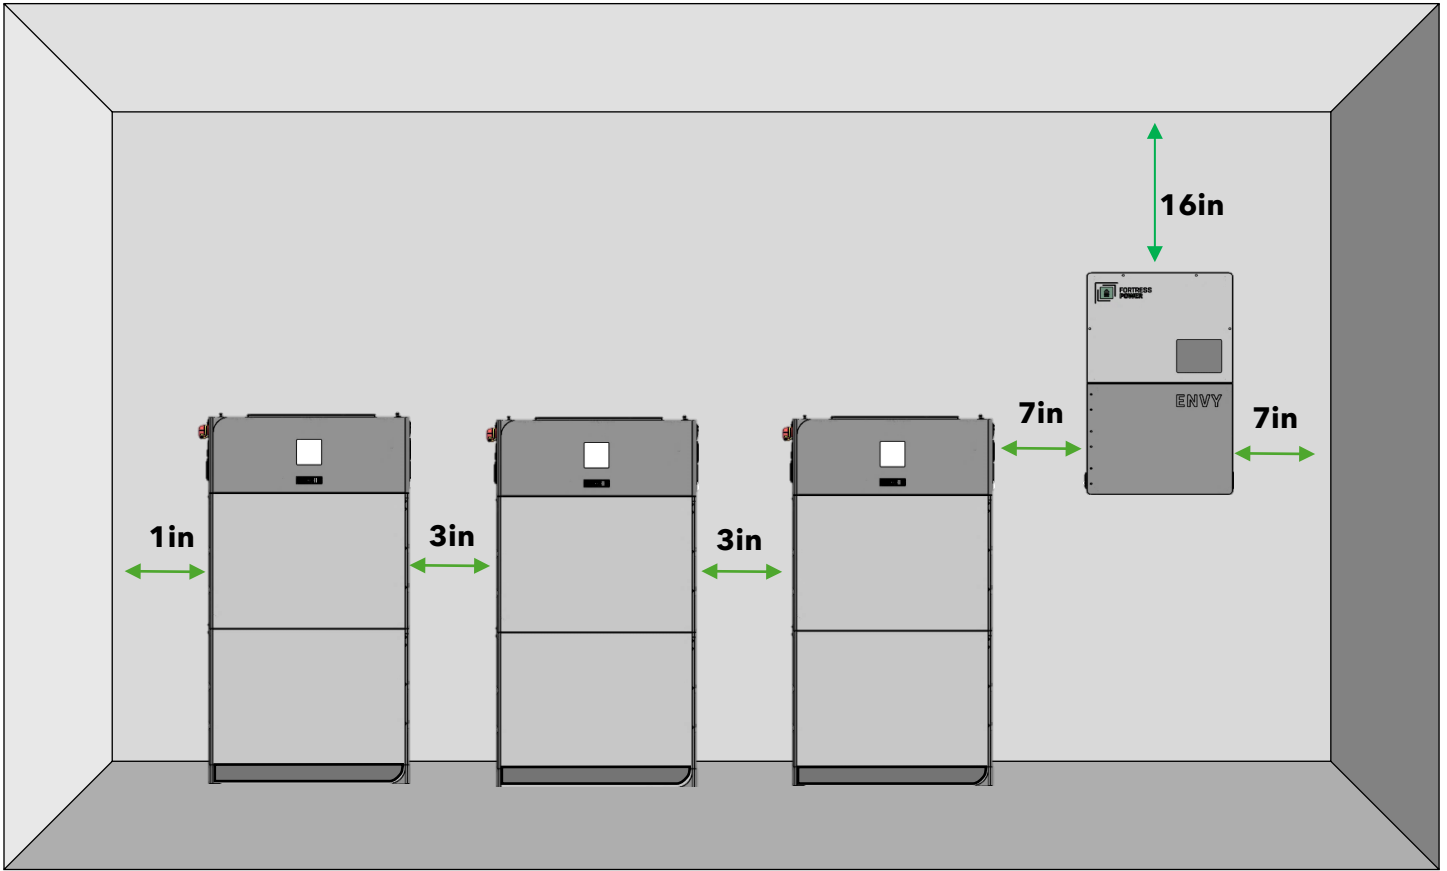


9.1 Acceptable but not limited Installation Configurations Ground Mounted, Floor Standing, or Wall Hanged (Separate Accessory)

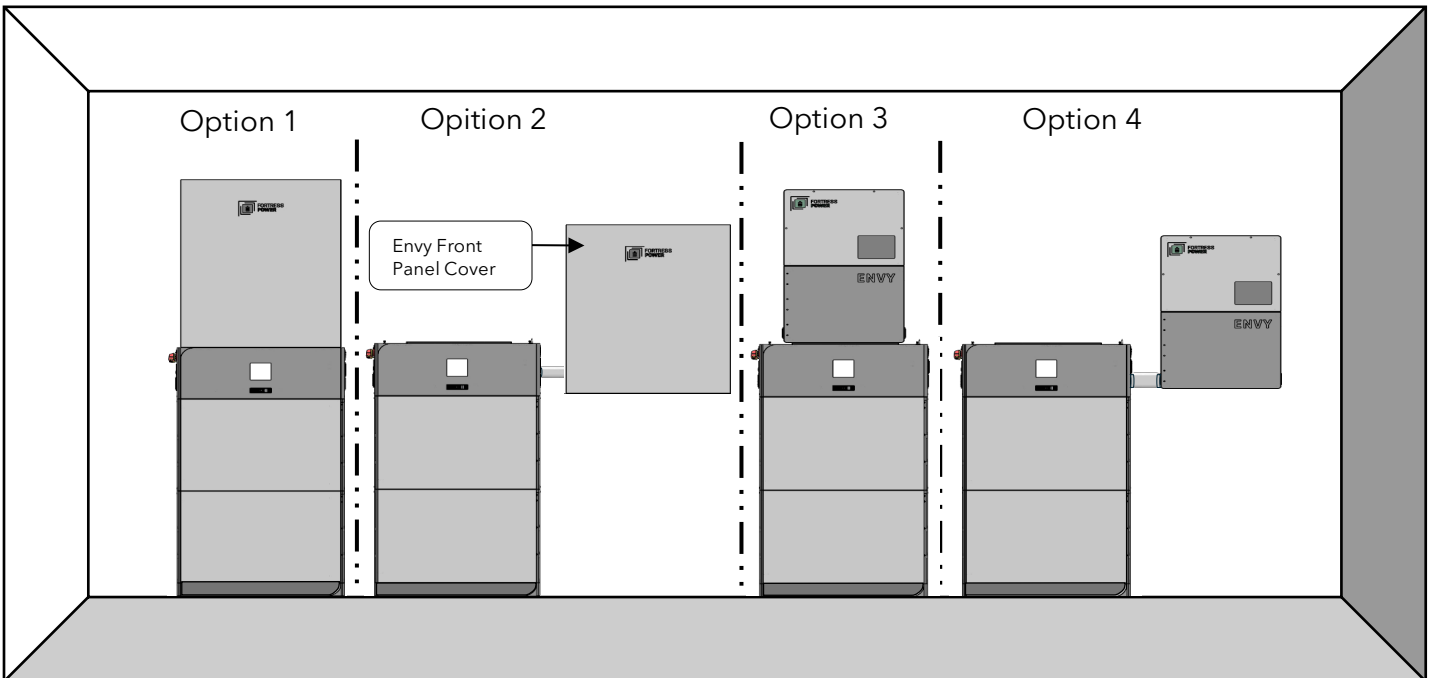





Wall Hanged (With Separate Accessory)

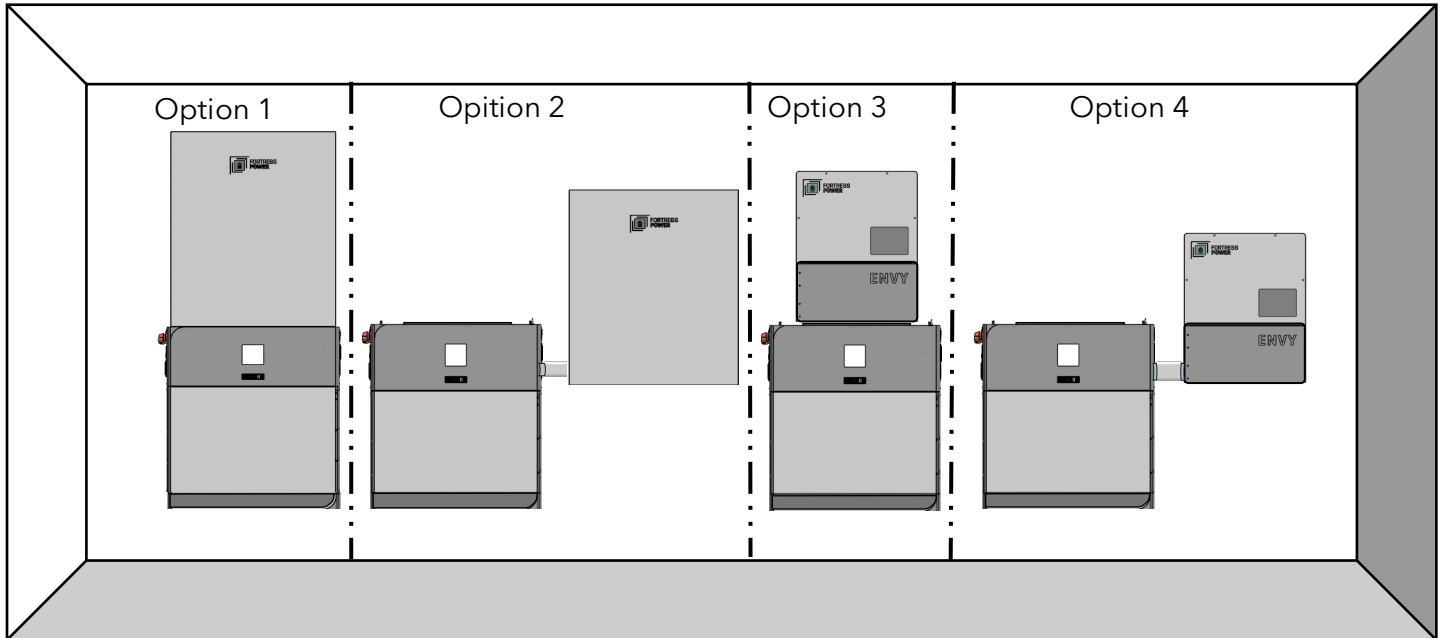

Warning! Make sure that the wall is structurally sound and that it may hold heavy weight load. Failure to do so may result in injury or potential death.

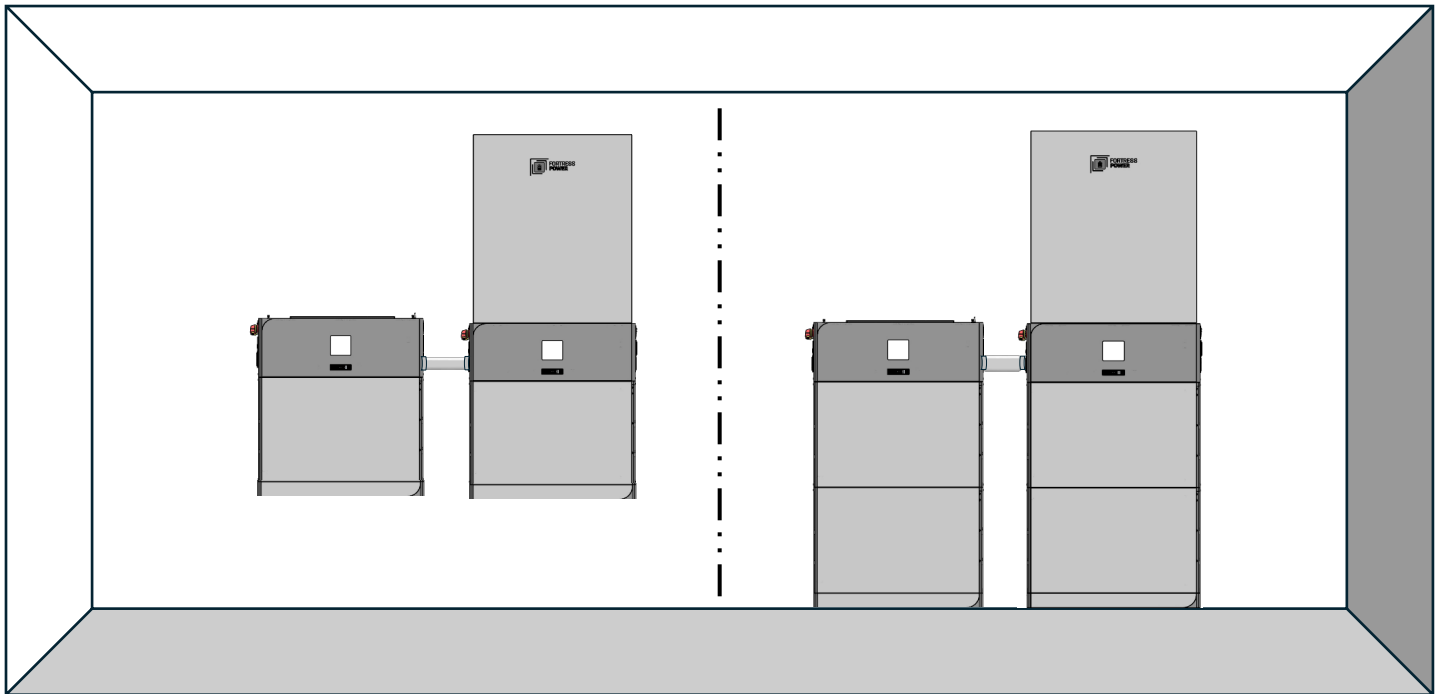

This configuration includes the option of bolting the eForce Base to a concrete slab or installing the included legs on the bottom. Optionally you may hang the eForce on the wall. Note: Make sure the Power Switch does not surpass 6'7" per NEC Code.

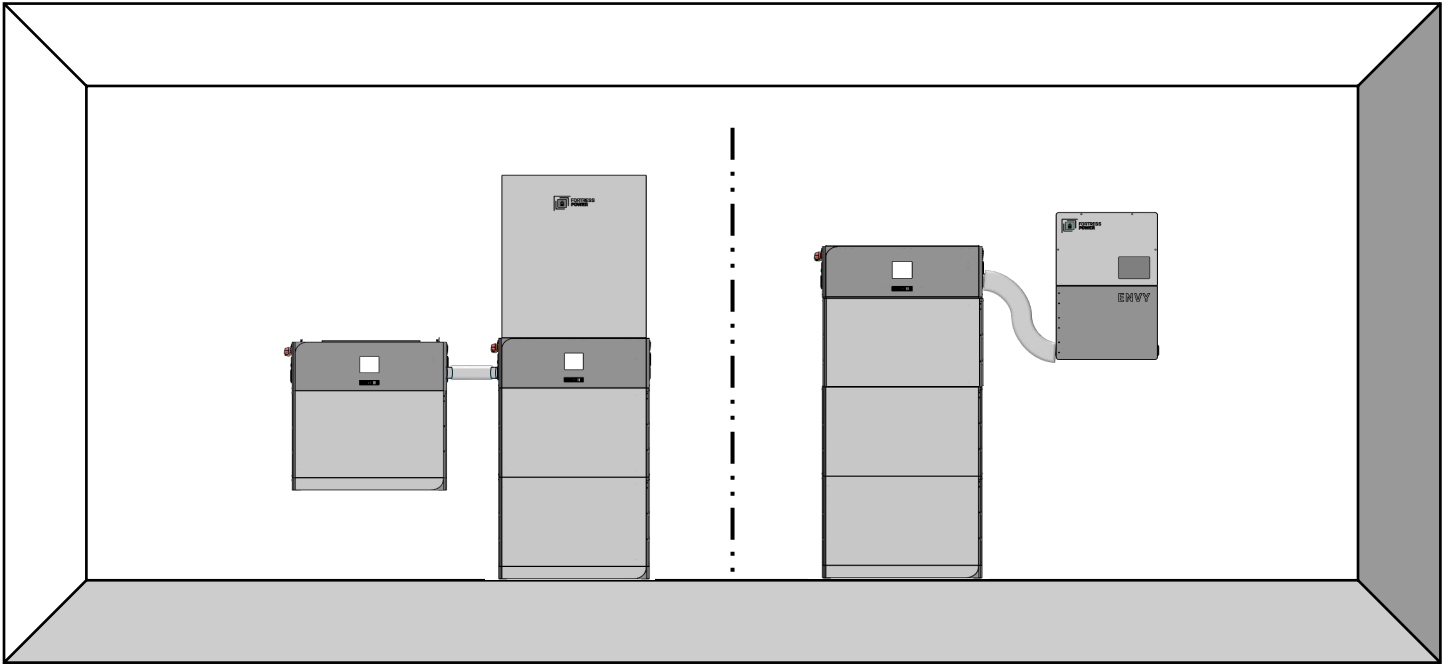



10. Installation

10.1 Preinstallation

1. Select the Mounting Location:

- Ensure the surface where the mounting base will be installed is clean, dry, and level.
- Measure and mark the mounting points according to the dimensions of the base.
- *The eForce 9.6 should not be installed in direct exposure to the sun.*


2. Safety Considerations:

- Wear safety glasses and gloves during installation to protect against debris and sharp edges.
- Ensure the installation area is free from obstructions and that there is adequate lighting.
- Clear the area where the battery module will be installed.

3. Weight Considerations

- Each battery modules weights 216lbs.
- The eWay weighs 33lbs.
- Ensure the floor is level and capable of supporting the weight of the battery.
- Ensure that two or more persons lift the battery modules together to evenly distribute the weight.

We highly recommend using a hand truck or any other machinery to move batteries from the transport vehicle to the installation site.

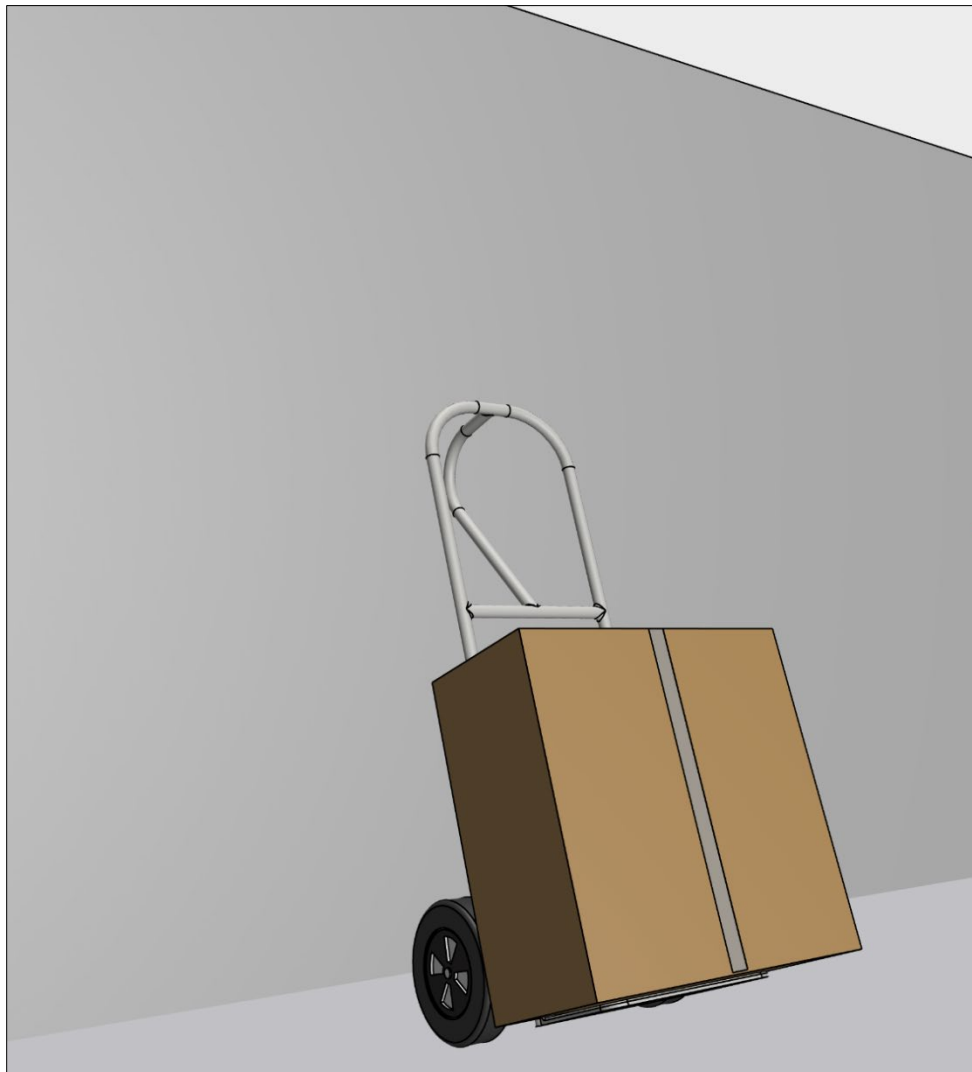



10.2 Mechanical Installation

10.2.1 Floor Standing installation.



Danger Floor must be Flat. This configuration is not allowed in rough and or highly porous surfaces. If so, consider the following Options:

1. Resurfacing the floor
2. Install the system with wall hanged configuration,
3. Install the system with Floor Fixed Configuration (surface may be slightly porous as long as its leveled and can withstand weight).


This procedure should help guide you in installing the template onto the base with the adjustable legs. Adjust the procedure as necessary to suit the specific requirements of your environment and materials.

1. Clean Area

- Clean Area and remove any debris, tools from the floor at the installation area.
- Ensure the installation area is well lit and free from obstructions.

2. Attach the Brackets

- Use the provided hardware to attach the brackets to the mounting base.
- Align and screw the two Wall fitted brackets to the designated positions on the mounting base.
- Tighten the hardware slightly to hold the brackets in place, allowing for minor adjustments.

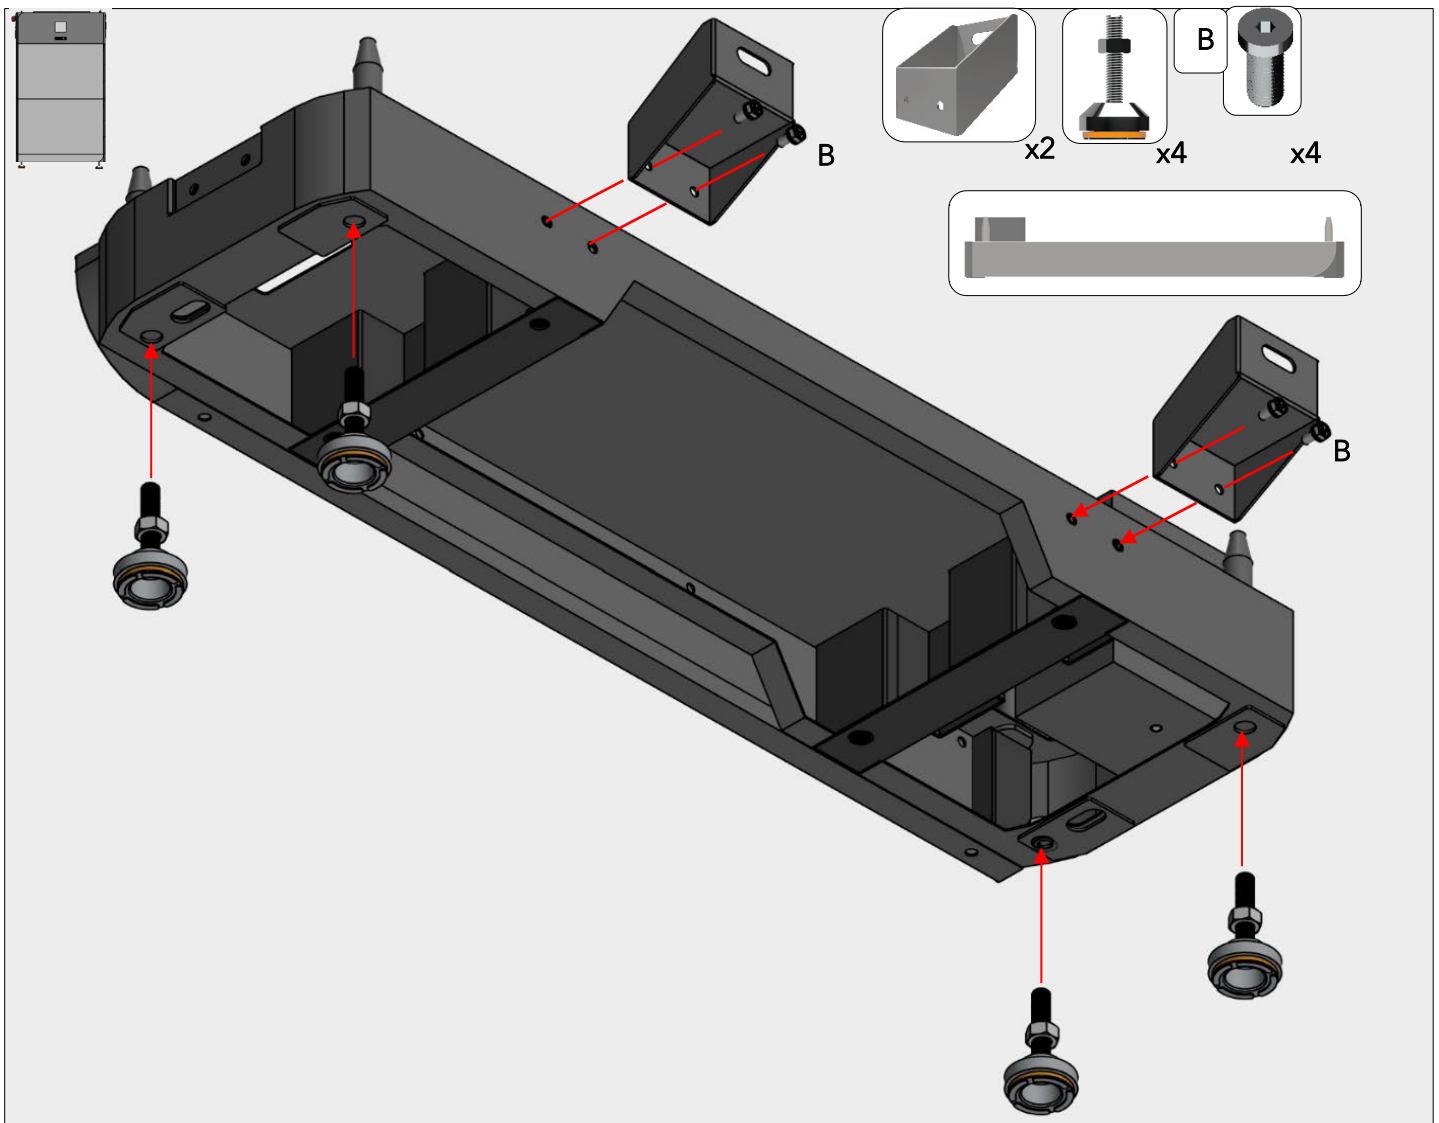



3. Install the Base Legs


- Align each base leg with its designated mounting point on the base.
- Screw the legs into the mounting slots. Tighten the connection points using a wrench or socket set, ensuring that the legs are firmly attached to the base.

4. Adjust the Legs:

- Check that the base is level and adjust the legs if necessary to achieve proper alignment.



Warning. Failure to do this procedure may result in battery installation misalignment and a proper battery to battery connection.

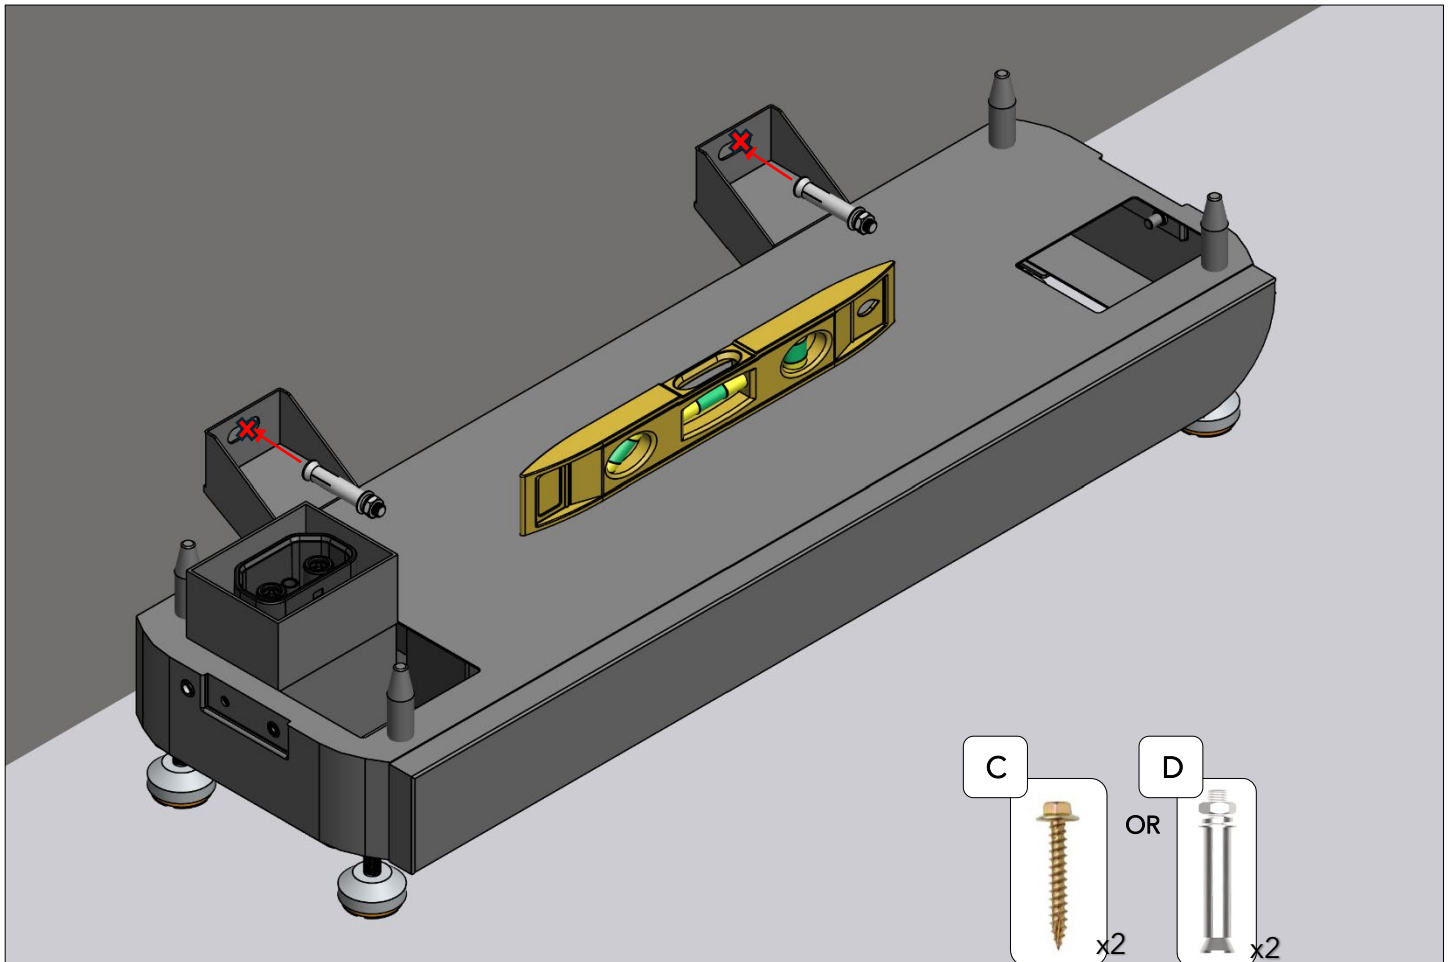

5. Fixing the base to the wall

- Position the mounting base (with attached legs) at the desired location against the wall.
- Identify with an **X** the spot in which the mounting holes must be drilled.
- Remove the base and drill holes. If mounting on a concrete surface, use a drill with a masonry bit to create holes for anchors.
- Insert the bolts through the mounting holes in the base and into the surface (anchors, if used).
- Fully tighten all connections on the brackets, base, and legs to ensure everything is securely attached.
- Check that there is no movement or wobble in the assembly. If there is, retighten everything.

6. Align the Template


- Position the mounting template (orange plate) onto the base.



- Using a marking tool, mark the locations of the mounting holes on the wall or surface where the template will be installed. These are indicated by the holes labeled “Wall/Fitted” and “on the template.”
- The template should be centered on the base and aligned with the pre-drilled holes or mounting points.
- Use a level to ensure that the template is properly aligned vertically and horizontally.
- Make minor adjustments to the position of the template as necessary.

7. Mark the Mounting Points and Drill Holes

- Use a drill to create the necessary holes at the marked locations.

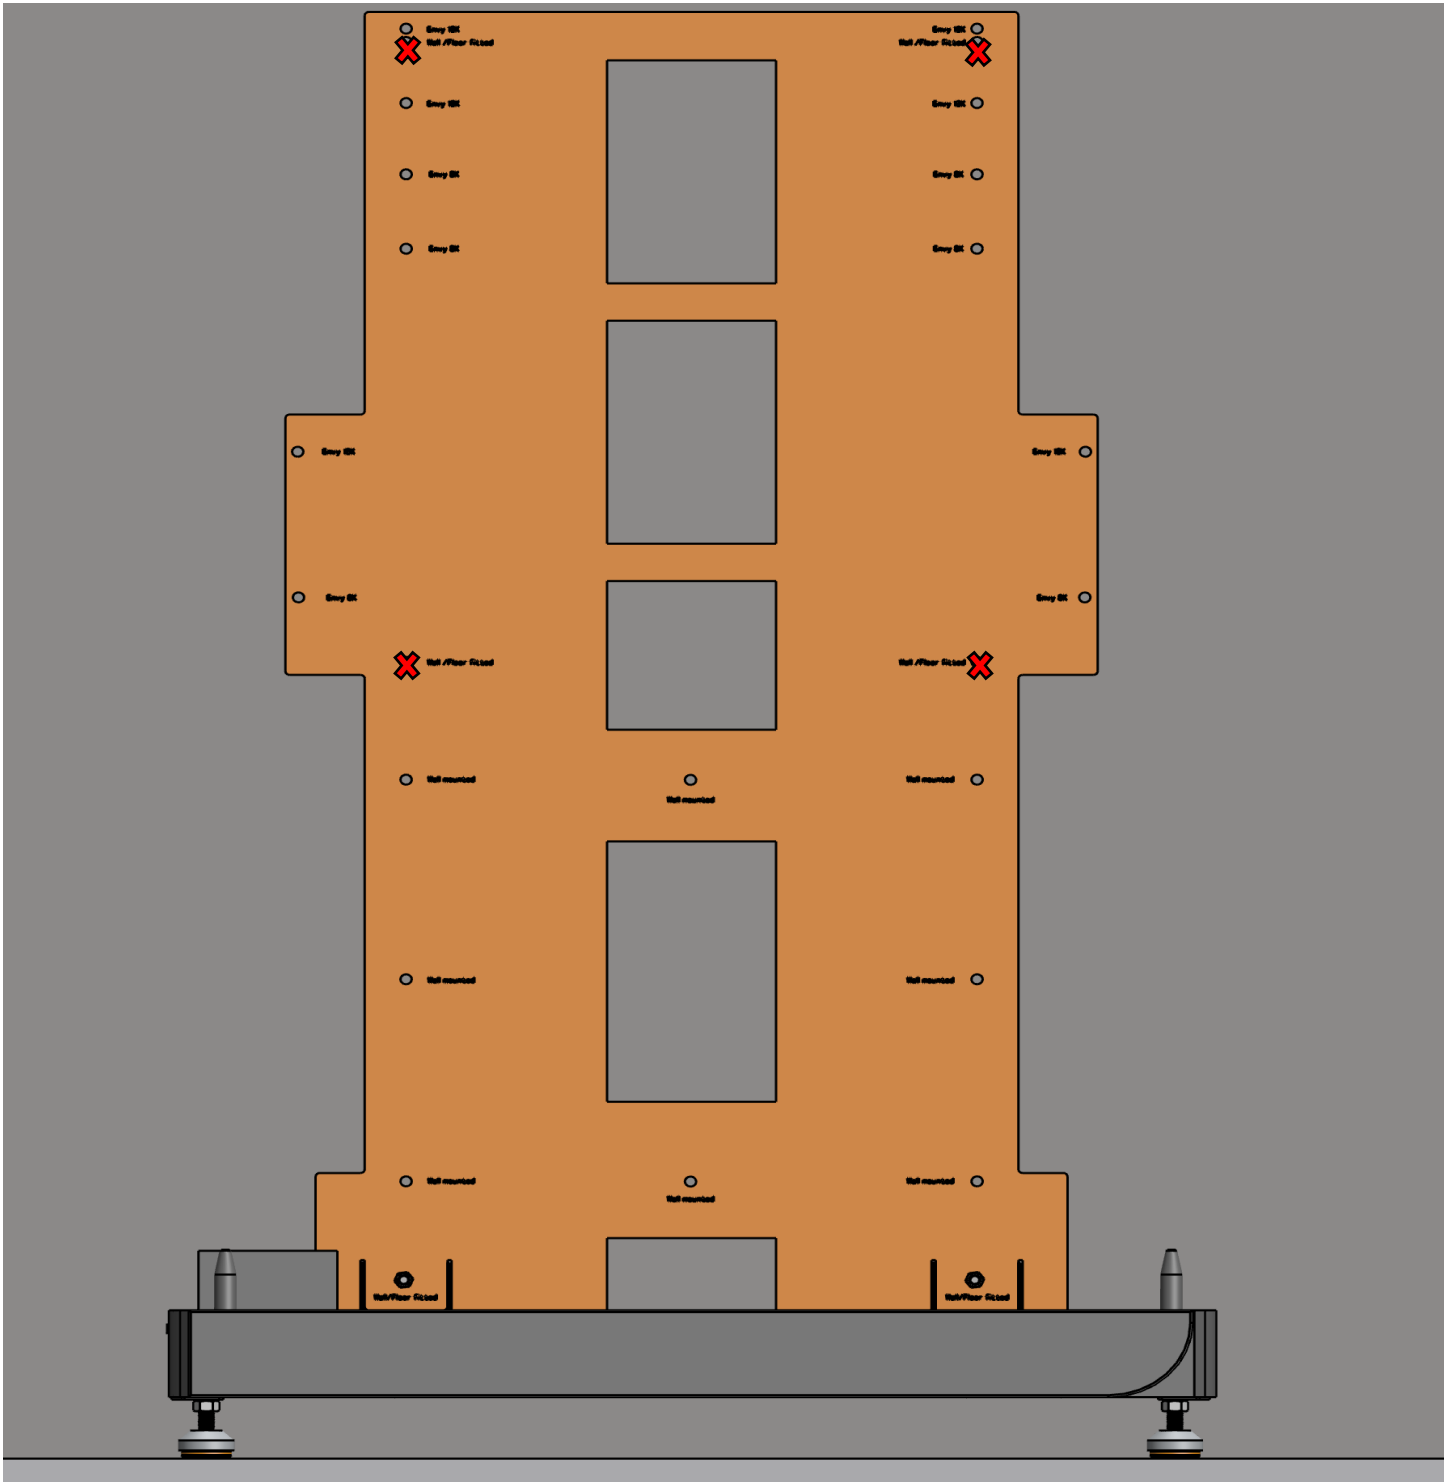



The battery modules weigh more than 50 pounds, use mechanical lifting equipment or team lift to reduce the risk of injury.

- Ensure all workers involved in the installation are wearing appropriate PPE.

8. Align the Brackets:


- Attach the brackets to the back of the battery module as shown in the image. These brackets will stabilize the battery module against the wall.
- Ensure the brackets are aligned and correctly positioned on the module.

9. Lift the Battery Module:

- Using proper lifting techniques and equipment, carefully lift the battery module. Ensure that all personnel involved are coordinated to avoid injury or damage. Use proper lifting techniques: bend your knees, keep your back straight, and lift with your legs.
- Carefully lower the battery module onto the floor-mounting feet. Ensure that the module is properly seated on the feet, with all weight evenly distributed.
- Align the battery module so that the bottom Amphenol connectors plug in directly to the with the connector at the base.

10. Secure the battery


- Screw the side braces. **Do not use impact tools during this procedure. Doing so may cause damage to the screw or and screw hole.** Secure the brackets to the wall with the corresponding

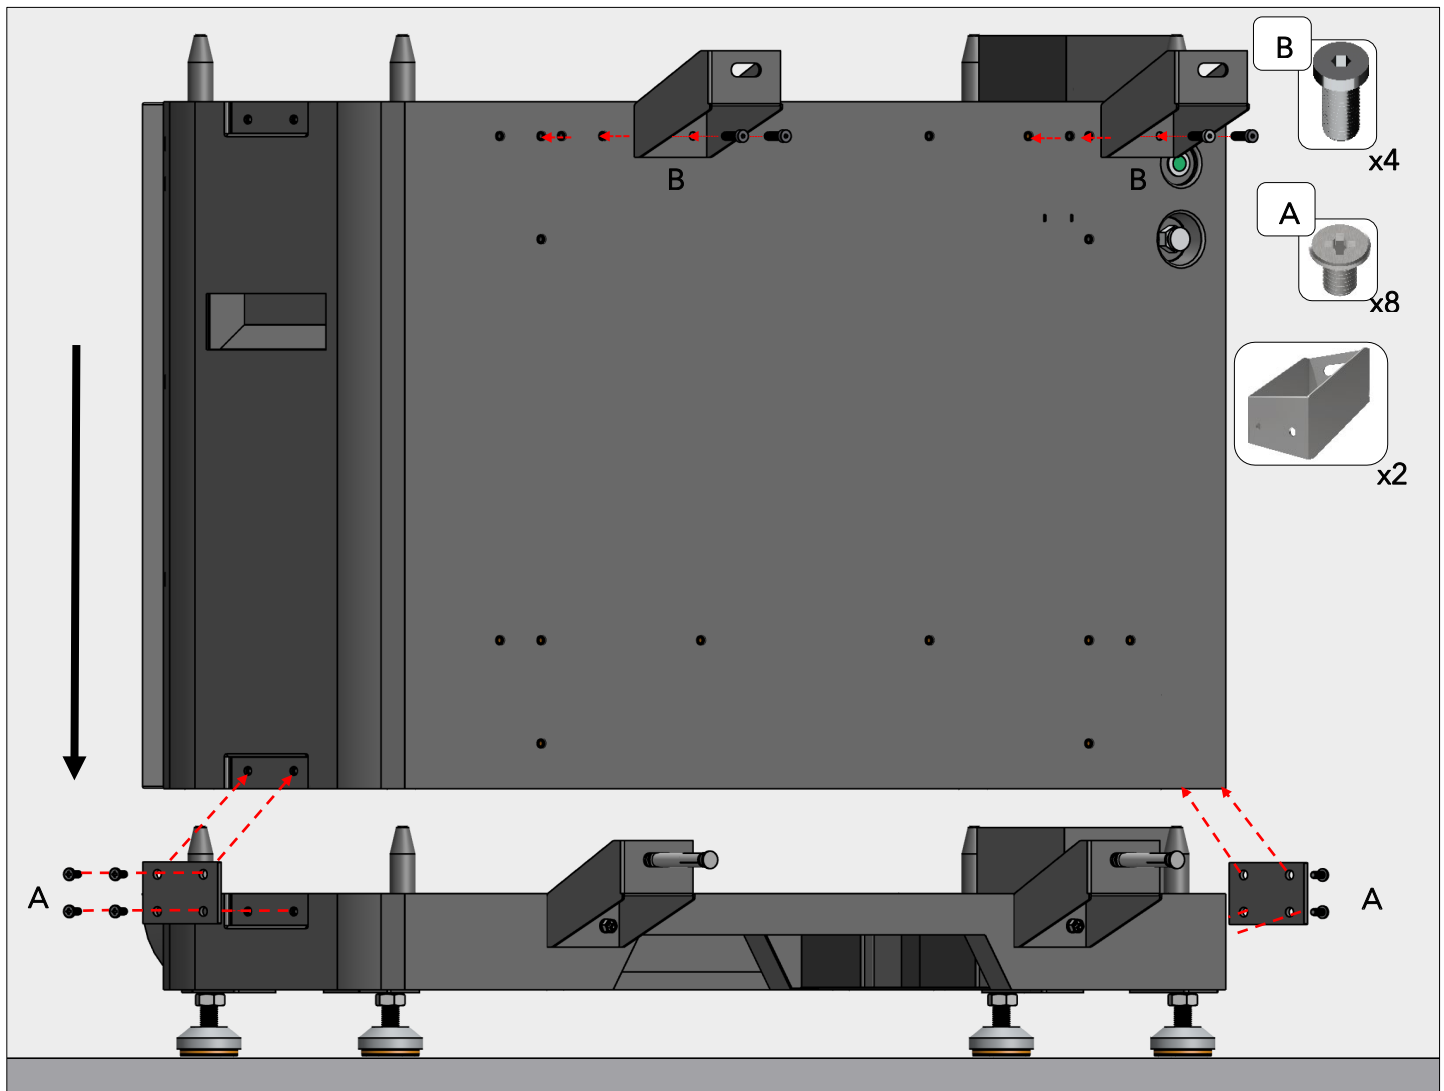



hole using the provided screws, or anchors. Ensure the battery module is stabilized and cannot tip or shift.

11. Repeat steps 8-10 when installing 1 or 2 additional batteries (Maximum of 3 batteries for vertical stacking). Use special lifting equipment when installing 3 batteries to allow the 3rd. battery be lifted/hoisted.

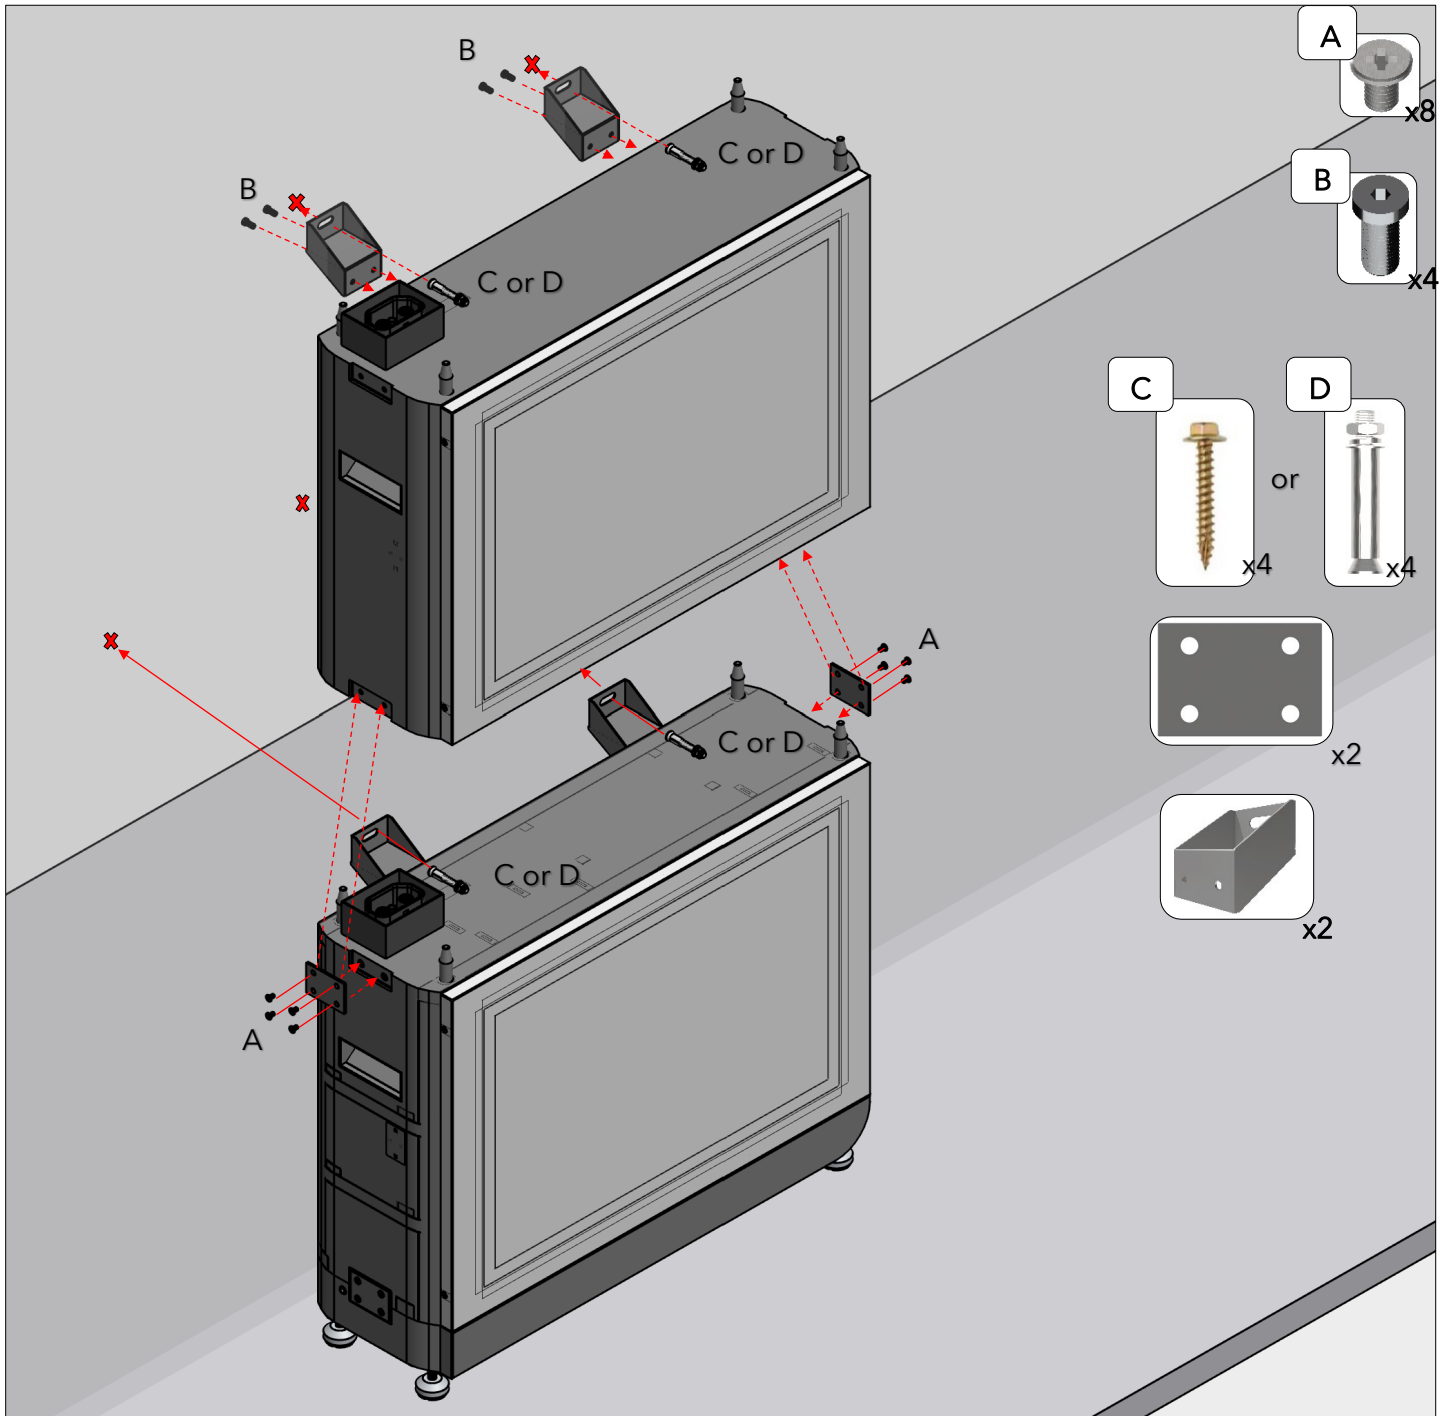




12.eWay Installation

- Finally, Mount the eWay on top of the battery and secure with side braces as seen in the image below.


10.3 Electrical Installation

- Using the included key, insert it into the **eWay** keyhole and unlock it.

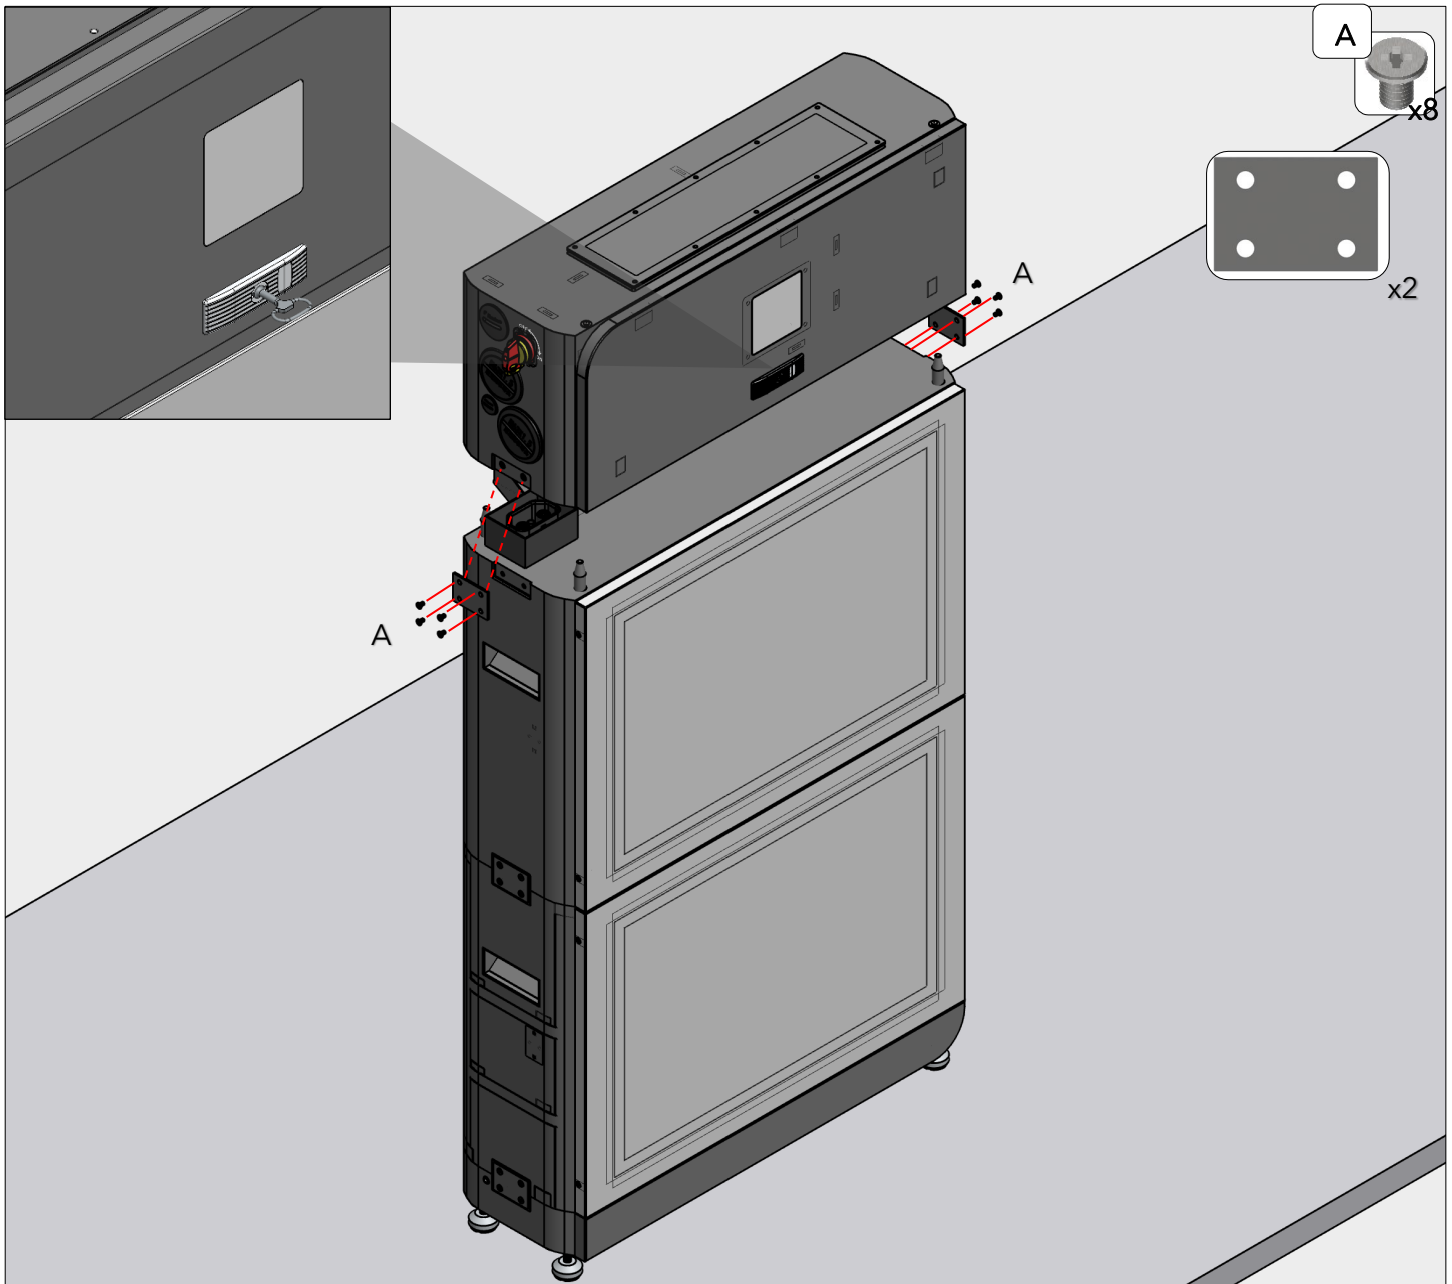


10.3.1 Connection Overview

One eForce Battery and Envy Inverter Electrical Connection Overview

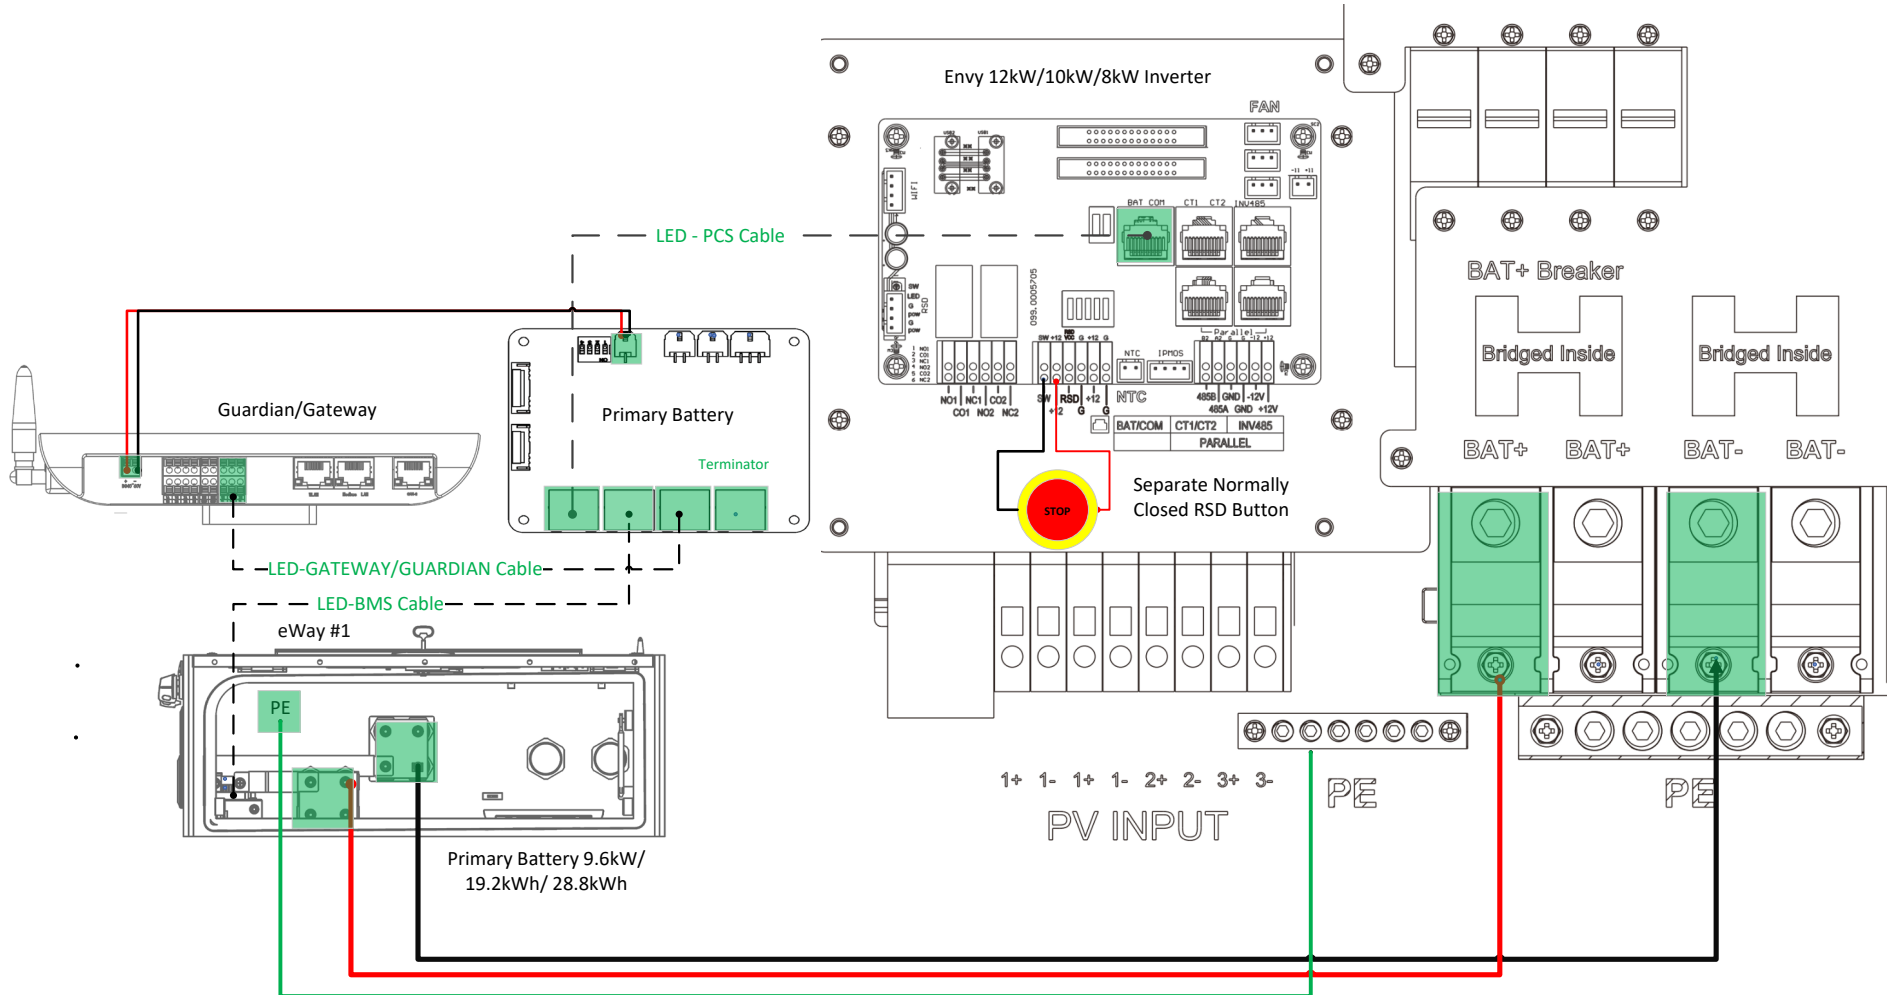


When operating with one battery, keep the terminator plug placed in its original position.


RSD features include complete system shut off by disconnecting the batteries voltage output, Disabling PV Voltage, and Load Output per NEC 2023 Code. To achieve this, Follow the connections in the above image.

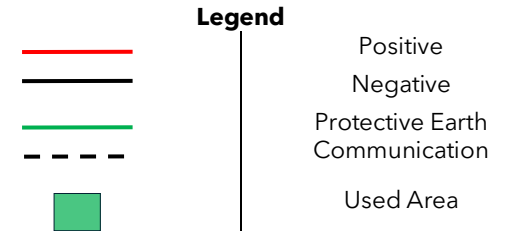


Two eForce Battery and Envy Inverter Electrical Connection Overview

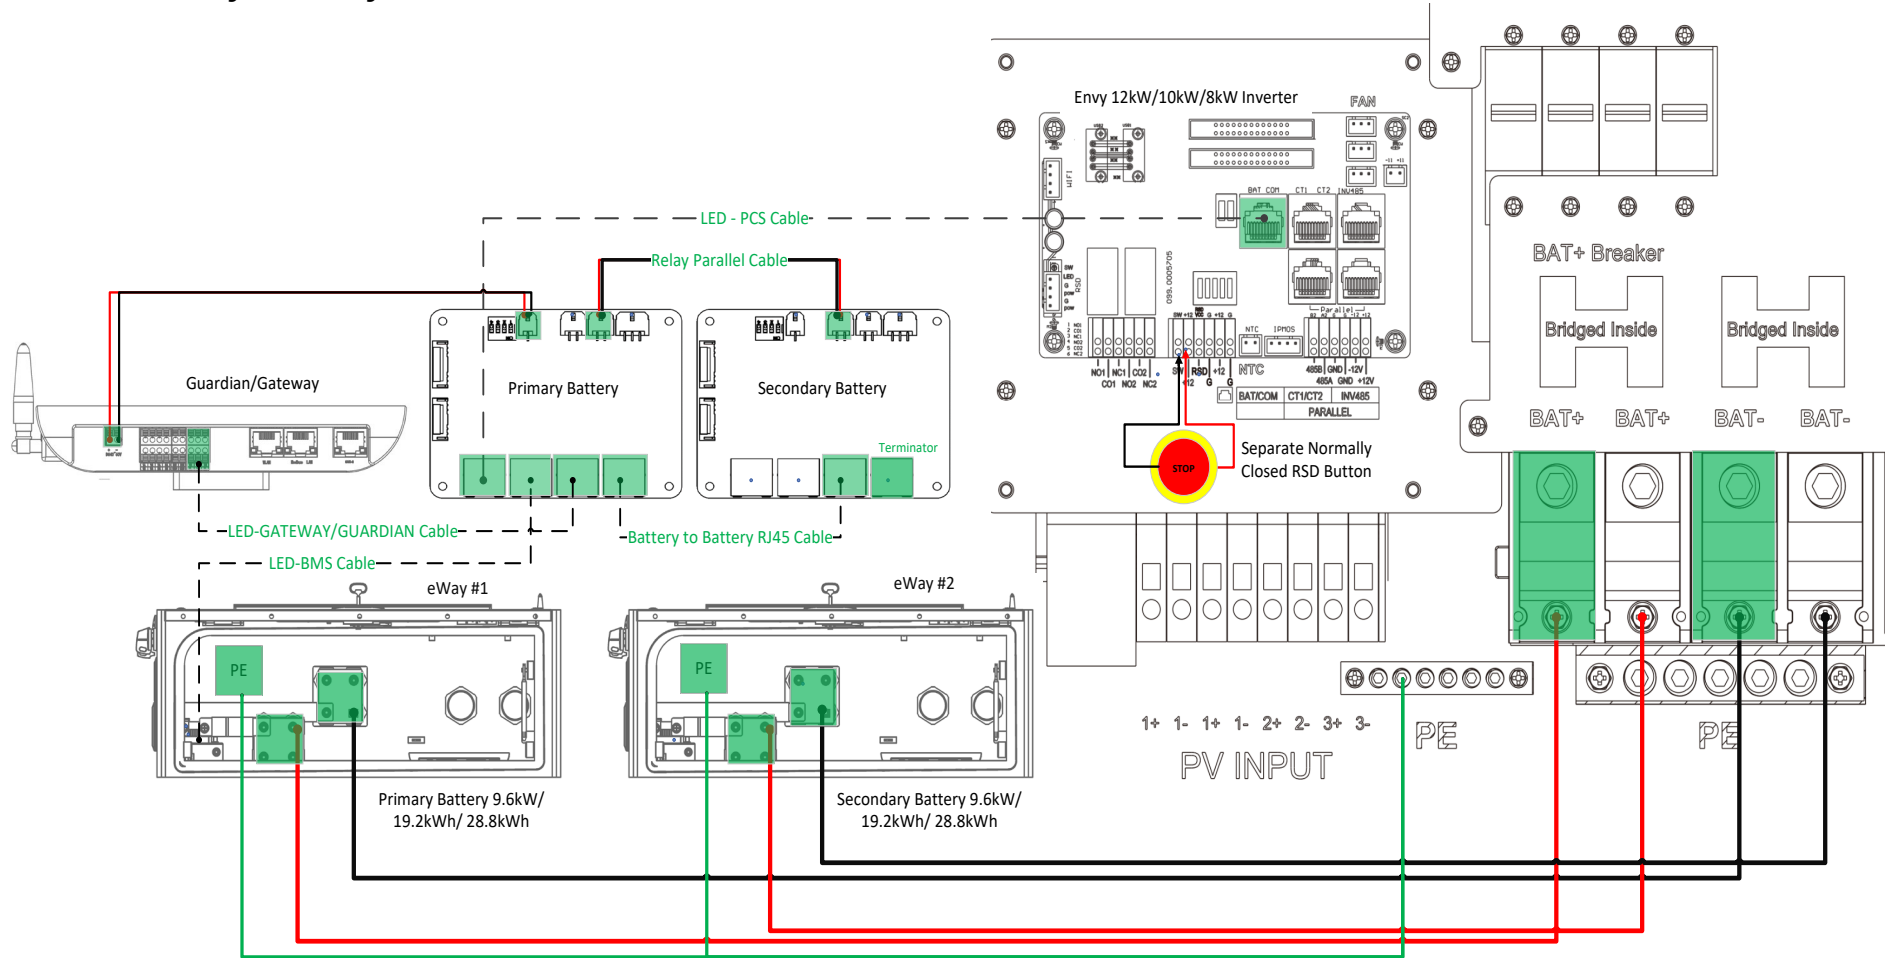

Remove the Terminator from the first battery and place battery to battery communication. Make sure that the secondary battery keeps the terminator connected in its original port. Connect the Battery -Battery RJ45 Cables in Daisy chain sequence starting with the first battery to the last. Place the Resistive RJ45 plug into the Terminator Port of the last secondary battery following chronological sequence starting with the Primary Battery. Plug the Relay Parallel Cable from battery to battery. For More details of parameter settings with the eForce, please refer to the Fortress Power Envy 12kW/10kW/8kW Manual.

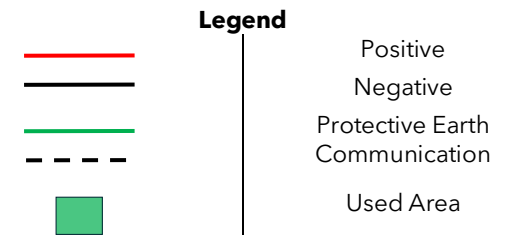


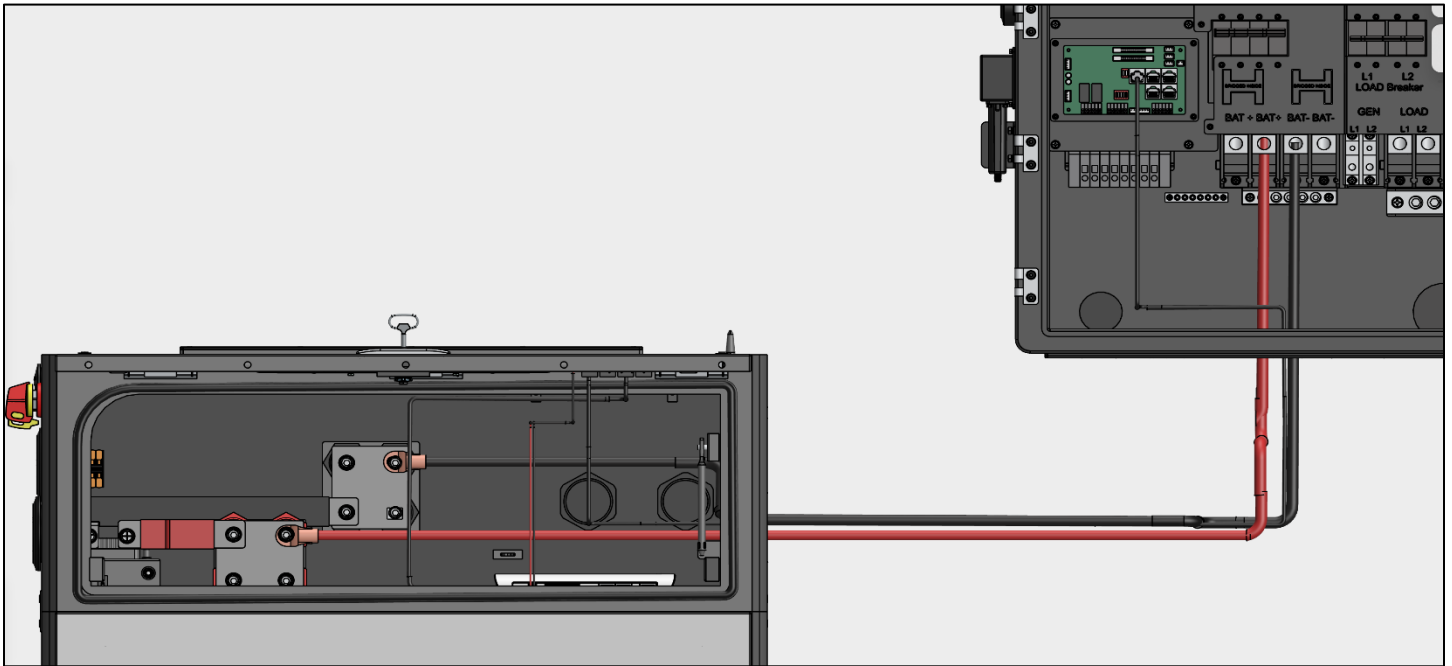

11. Commissioning


11.1 Commissioning a single or multiple batteries with one eWay

1. For Commissioning batteries where multiple eWay are in parallel, please go to the "Commissioning in Parallel" section.
2. Turn the battery breaker on the inverter side.

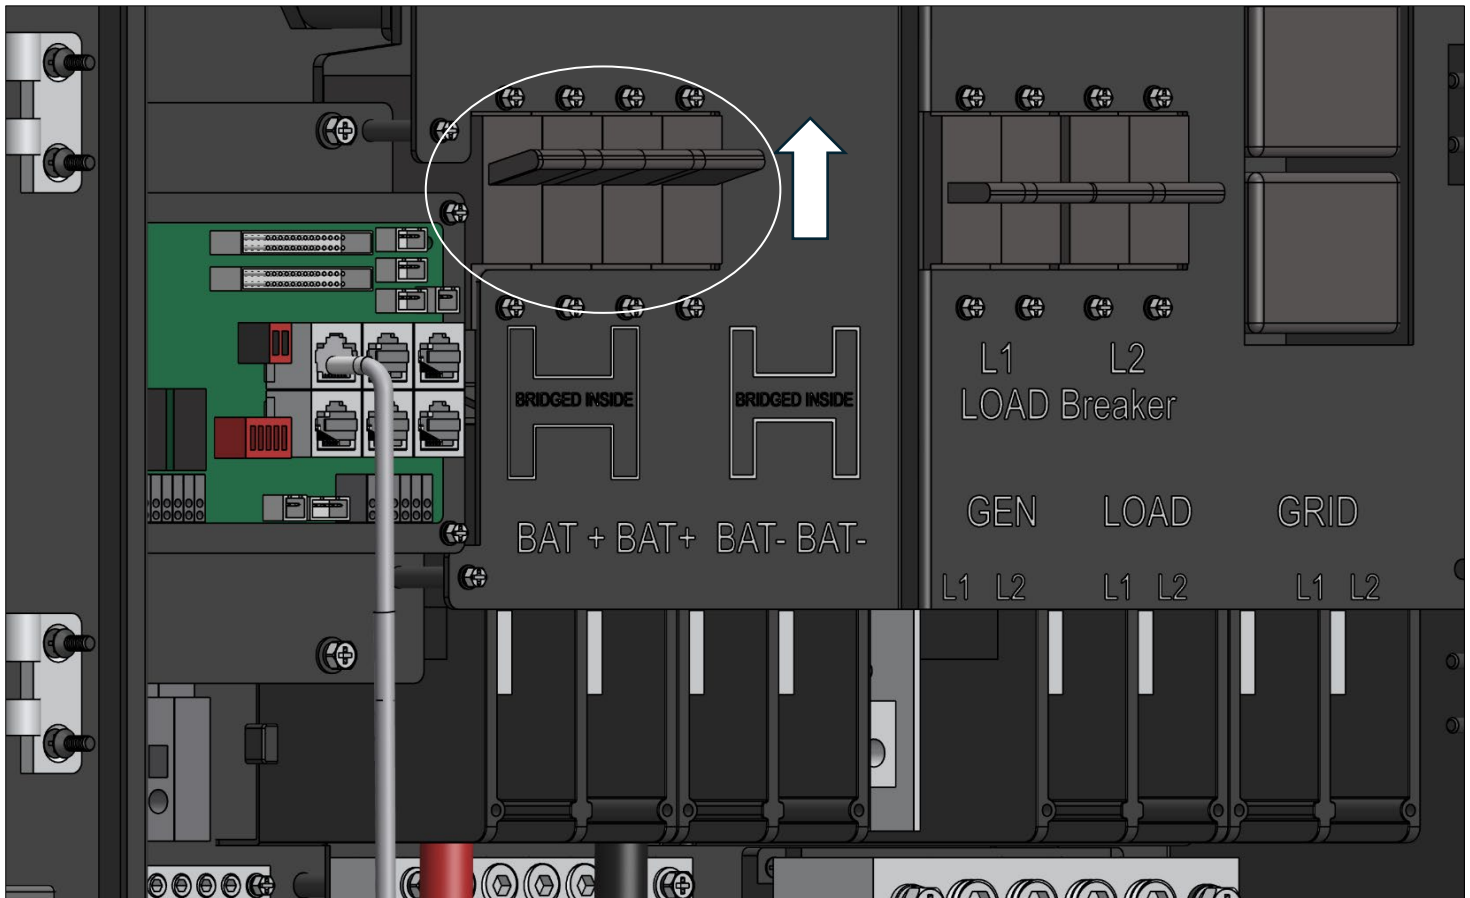



3. Then turn the battery power switch on as shown in the image below. The battery will make clicking sound which means that the internal contactors have energized the battery. Verify by applying a voltmeter at the eWay internal busbar.

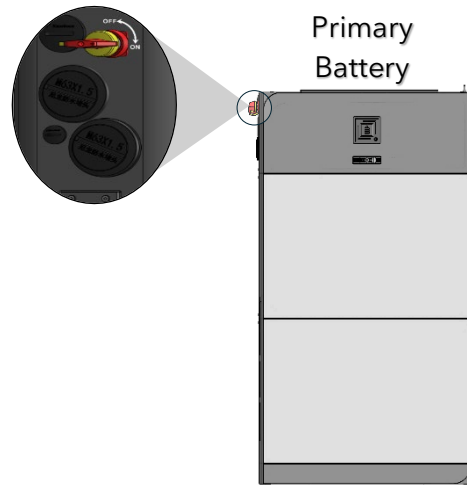


4. Make sure that the Guardian is powered on and follow the Quick Start Guide starting with step 6. https://www.fortresspower.com/wp-content/uploads/2022/09/Guardian-Quick-Start-Guide_v4.pdf
5. Scan the QR CODE on cover page of the manual to download the Guardian APP.

11.2 Commissioning multiple eForce 9.6 batteries in parallel

For a maximum battery bank size of 153.6kWH, up to 16 eForce 9.6 batteries can be connected in parallel. All wires should be an appropriate gauge and constructed to manage the loads that will be placed upon them. A qualified installer should understand this and must adhere to industry standards and published electrical guidelines. The storage capacity and total permissible charging and discharging amperage are increased by the parallel arrangement. The overall voltage is not changed. Instead, the available amperage from the system is increased with each additional parallel battery. For example, in a parallel system with two batteries, the available charging and discharging current is twice that compared to a single battery. Please follow this procedure to commission eForce 9.6 batteries in parallel:

1. Double Check if battery to battery communication cable is connected and secured.
2. Turn On all DC Breakers ON (Hybrid Inverter, Charger Controllers)
3. Turn on the first battery's Power Switch (the first battery is the one communicating with inverters). **Do not turn on the switch of the other batteries.** If all cables are correctly connected, LED will commence booting sequence, and the other batteries will engage by making a clicking sound.

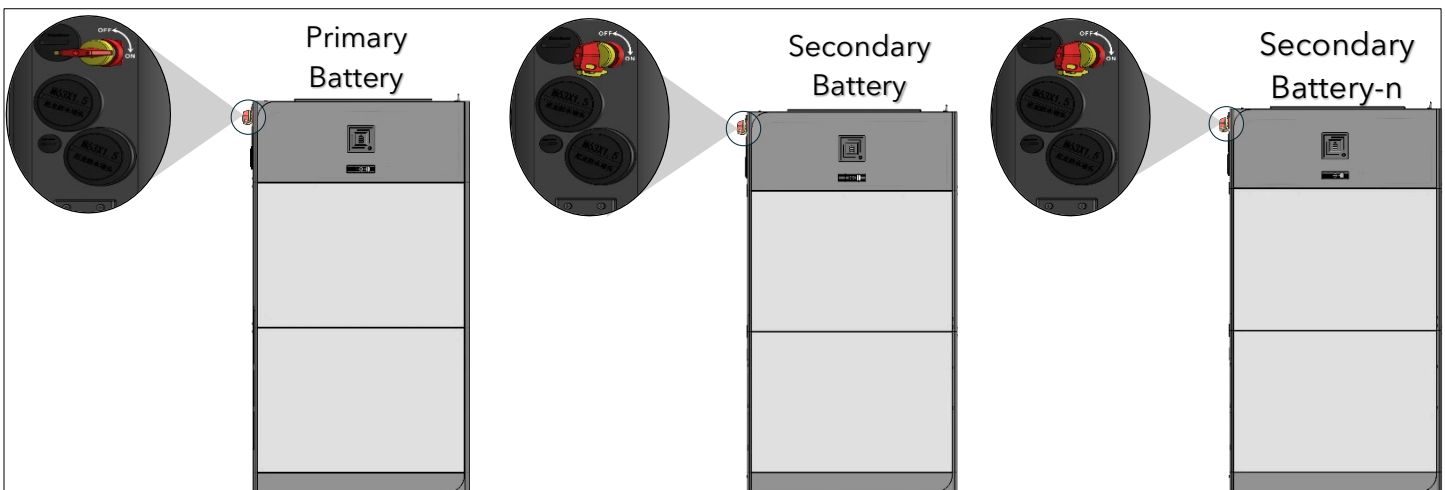

4. Measure Voltage inside the eWay busbar to confirm.



5. For inverter-specific settings, visit <https://www.fortresspower.com/support> for the most recent integration manual for the specific inverter brand.

12. Settings

12.1 Voltage and Amperage Settings



IMPORTANT The Hybrid Inverters need to be digitally programmed to comply with correct amperage and voltage stated elsewhere in this guide. Special communication cables may need to be field made. If using battery-inverter communication, please consult our inverter guides:

<https://www.fortresspower.com/inverter-guides>

- Do not use unqualified equipment for charging and discharging, please follow the correct instructions for use.
- Do not discharge the battery when the battery is depleted.
- Do not charge or discharge batteries that are hot, deformed, or leaking.
- The output cable length of the battery should be less than 10 meters long.
- Do not connect power and load that exceeds the power level to the two ends of the battery.
- Do not mix different batteries. Different manufacturers, chemistry, models, and lifespans cannot be paralleled.

12.2 System Commissioning

Final installation and operation guidelines will be dictated by your Electrician and Installer based on the specifics of your installation and any code requirements that apply to your region. Fortress Power technicians and sales staff are available to provide any additional information on the Fortress Lithium Batteries as needed. Please be aware of the potential electrical hazards before interacting with any and all electrical or mechanical devices. Please take all necessary safety precautions in your projects and installations.

Charging Voltage:

Without battery-inverter communication, eForce 9.6 batteries should be charged at 52.5V. With battery-inverter communication, eForce 9.6 batteries this voltage may be increased according to the published inverter guides:

<https://www.fortresspower.com/inverter-guides>

Low cut-off voltage:

The eForce 9.6 battery is below a 20% state-of-charge when its resting voltage is below 46V. In order to keep the inverter and battery system powered up while waiting for a charge, this is the recommended low battery cut-off voltage. It is appropriate to lower this to 46V if using a generator or grid charge to automatically maintain or charge the battery at 48V or above. The eForce 9.6 has a safety feature that will cut around this voltage level if necessary. If you regularly deep discharge the eForce 9.6 down to 42V, please increase your battery size or upgrade your inverter to maintain warranty compliance.

Charging and Discharging Amperage

The eForce 9.6 can safely operate at 195A per battery, but its maximum rating is not intended for long duration use. Unless otherwise specified through our inverter guides, set the charge and discharge rates of the eForce 9.6 at 100A to comply with the 10-year warranty. Any grid sellback or demand management function should also be limited to 100A per eForce. Limiting the charge rate of the eForce 9.6 to 60A will result in the longest battery life.

Precaution should be taken when adding charging sources which are not controlled by a single inverter or control system (Ex. using different manufacturer's DC charge controllers and inverters, solar + wind



inverters, EV chargers etc.) to ensure the total system charges or discharges the battery within its specification. controllers do not charge the battery concurrently, when and if their combined charge current totals are greater than the charge current of the combined battery bank. Take additional extra precautions when using wind power to charge the battery, or if the inverter and charge controllers are not the same manufacturer.

12.3 Charging Notes

If the following scenarios occur, the battery must be charged before use, otherwise the battery damage caused is not covered by the warranty:

- The battery has not been powered on or otherwise discharged without any charging sources available.
- The battery has been turned off for a long period during transportation or storage.
- The battery has been deeply discharged and reached under-voltage protection status.
- The battery has been aggressively recharged during deep discharge conditions through bypassing the BMS.
- The battery has been recharged during freezing condition through bypassing the BMS.
- Bypassing the BMS is not allowed without logging a support ticket with Fortress Technical Support at <https://support.fortresspower.com>

12.4 Discharging Notes

- Do not regularly discharge battery below 46V, 20% SoC. This capacity should be reserved for power outages and idling the load until a charging source can be applied.
- Do not discharge battery at rates greater than maximum continuous current.

Parameter set up guide for Charger/Inverter

Unless explicitly stated in Fortress inverter guides or contrary to the above charging amperages and voltages, charge controller and inverter settings must be programmed per the manufacturer’s recommendations. Consult the manufacturer’s manuals and/or access technical support. To achieve extended life cycles and to comply with the Warranty, the following guidelines should be followed:

12.5 Understanding Charge Stage

1. Bulk Charge: Charge at Constant Current (CC) to Bulk/Absorb Voltage.
2. Absorption Charge: Maintain Constant Bulk/Absorb Voltage (CV). Note - if the battery is not reaching 100% capacity, it is allowable to adjust this voltage from 52.0V to 52.5V. Any higher charging voltage must be explicitly stated a Fortress inverter guide specific to that brand of inverter.
3. Unless otherwise stated in a Fortress inverter guide, keep float voltages at 52V or less to maintain warranty compliance. While most end users will want to enable a float mode of operation if available to keep batteries at 100%, it is healthier for the battery only to use the bulk/absorb cycle - which allows the batteries to exercise daily.

12.6 Heating Element Operation

TEMPERATURE	HEATING ELEMENT STATUS (125W)	CHARGE/DISCHARGE STATUS
≤ -4°F (-20°C)	OFF	OFF/OFF
-4°F (-20°C) < TMIN ≤ 32°F (0°C)	ON	OFF/ON
32°F (0°C) < TMIN ≤ 41°F (5°C),	ON (Stop Heating @ Tmin > 50°F (10 °C)	ON/ON
TMIN > 41°F (5°C)	OFF	ON/ON/
VMIN < 3V OR SOC < 20%	OFF	ON/ON



The integrated heaters are energy-efficient, activating only when necessary, to preserve battery life and enhance overall system efficiency.

12.7 Decommissioning

At the End of Cycle Life retained capacity is equivalent to 70% Year 1 Capacity. eForce 9.6 contains scrap material useful to recycling. Dispose of the battery at a local recycling center or ship back to Fortress Power. Transport end-of-life batteries at 30% state-of-charge.

Key Points Summary

- 1.** Each Fortress Lithium Battery contains circuitry that protects the Lithium Ferro Phosphate cells from overcharging, over-discharging, and excessive load amperage. If the values specified are exceeded, the battery will enter a protective shut down state. In some cases, this may result in the need to reinitialize an inverter charger or other pieces of equipment in the installation. In other cases, the inverter's system settings may be saved within the inverter memory storage and will not need to be reset. This is not an absolute standard but is common among most inverter chargers. Check your inverter manufacturer specifications.
- 2.** Although each Fortress Lithium Battery contains circuitry that protects the Lithium Ferro Phosphate cells from overcharging, over-discharging and excessive load amperage, Fortress Lithium Batteries must always be installed with a charge controller and the appropriate settings to protect the batteries from open PV and other high voltage sources. Fortress Lithium Batteries alone will not protect from extreme electrical phenomena.
- 3.** GRID TIED SYSTEMS: Once the Fortress Lithium Battery has been installed, turn on the entire system to test. Once testing has been completed, please disconnect the batteries from the load center until your local Utility Inspector is ready to turn on the entire system. The charge controllers and inverter monitoring systems can drain the Fortress Lithium Batteries over an extended period when the entire system is not fully operational due to the electrical draw of the system components.
- 4.** OFF GRID SYSTEMS: Do not connect the Fortress Lithium Batteries until the entire system is ready to turn on and is fully operational.
- 5.** See Inverter and Charge Controller Settings on the Fortress Power website for recommended settings at <https://www.fortresspower.com/resources/>.



13. Contact Information



FORTRESS POWER

Secure your energy

For Technical Support Please Contact us at Tech-Support Contact Information

Useful Links

- Phone:
Tech Support (877) 497-6937
Tech Support (Spanish) (215) 710-8960
- Support Tickets: <https://www.fortresspower.com/support/>
- Warranty Submittal: <https://www.fortresspower.com/warranty/>

Updated Documentation
SCAN HERE



System Design Tool
SCAN HERE

